


**FIG.1**

Ref.No.	Part No.	Description
1	11802QMN2000	Valve, second air intake
2	41950QNA2000	Bracket
3	11880QLAZ110	Clip
4	11850QMN2000	Pipe, rubber
5	11870QNA2000	Pipe, intake
6	09169Q090001	Gasket
7	B15539	Pipe, vacuum
8	02304Q060162	Bolt M6×16
9	09401Q063001	Clip 6

**FIG.2**

Ref.No.	Part No.	Description
1	13701QNA2000	Air cleaner assy
2	13781QMNZ000	Element, air cleaner
3	13791QMNZ000	Frame, filter
4	13810QMNZ000	Strainer, air cleaner
5	13753QMNZ000	Screw M5×45
6	05420Q011054	Washer 5
7	13883QMNZ000	Clamp, spring
8	13881QNA2000	Tube, outlet
9	13820QLAZ000	Clamp
10	13853QNA2000	Tube, ventilating
11	09401Q134001	Clip, connecting tube
12	13878QMNZ000	Tube
13	13877QMNZ000	Plug, pipe
14	13999QMNZ000	Plug pipe
14A	<a href="#">11081QMN2050</a>	<a href="#">Pipe, second air intake</a>
15	13751QMNZ000	Nut
16	<a href="#">02304Q060122</a>	<a href="#">Bolt M6×12</a>

**FIG.1**

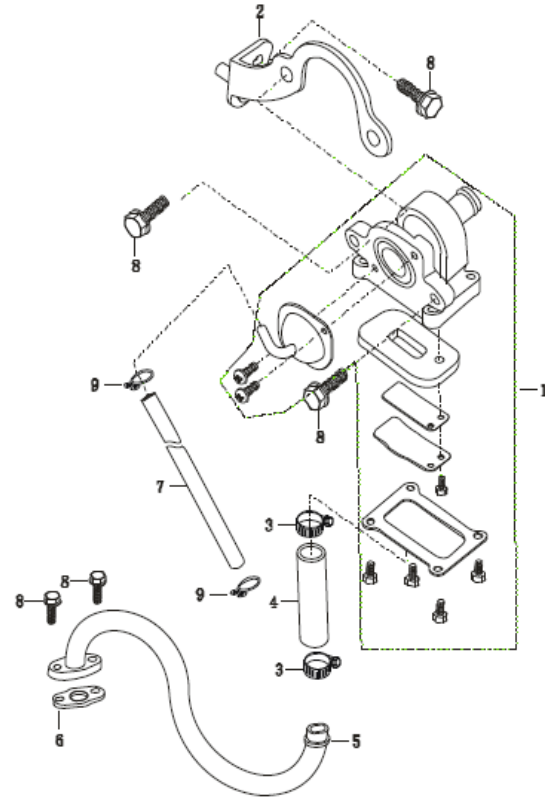 

**FIG.2**

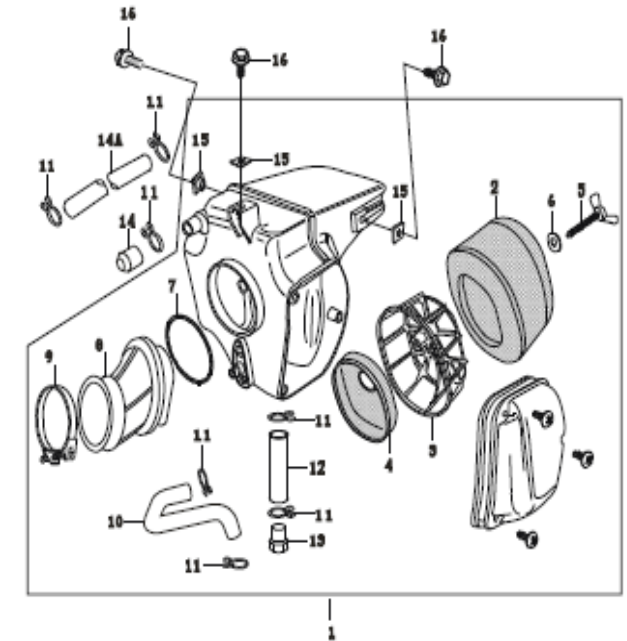 


FIG.3

MUFFLER

Ref.No.	Part No.	Description
1	14031QNA2000	Exhaust muffler assy
2	14011QNA2000	Exhaust pipe assy
3	14310QNA2000	Muffler assy
4	14771QNA2000	Bush
5	14450QNA2000	Set, connect
6	02304Q080404	Bolt M8×40
7	14186QNA2000	Protector, exhaust pipe
8	03611Q060093	Screw M6×9
9	05421Q011063	Washer 6
10	05420Q071063	Washer 6
11	<a href="#">14181QMNZ000</a>	Gasket, exhaust pipe
12	03614Q008251	Bolt M8×25
13	05421Q011081	Washer lock 8
14	<a href="#">02304Q080302</a>	Bolt M8×35
15	05420Q051081	Washer 8
16	14472QMNZ000	Spacer
17	14471QMNZ000	Cushion, rubber
18	14474QMNZ000	Washer
19	14475QMNZ000	Washer, rubber
20	02304Q080302	Bolt M8×30

FIG.3

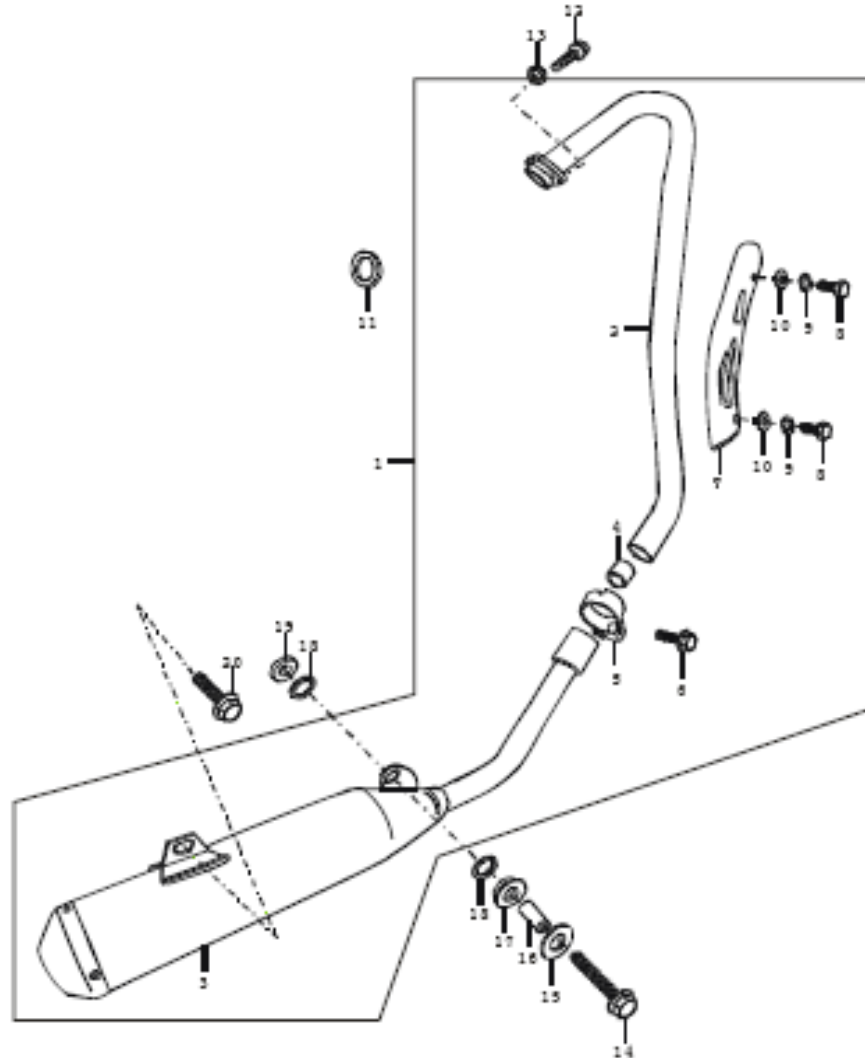 


FIG.4

FIG.4

Ref.No.	Part No.	Description
1	31801QLKD000	Relay assy , starting
2	05420Q011064	Washer 6
3	05421Q021064	Washer 6
4	05401Q011064	Nut M6
5	02304Q060122	Bolt M6×12
6	33810QNA2000	Lead wire, starting motor
7	38600QMD2000	Flasher
8	38628QMD2000	Seal, flasher
9	32801QEK8100	Rectifier assy
10	02304Q060202	Bolt M6×20
11	02304Q060252	Bolt M6×25
12	09404Q084001	Clip

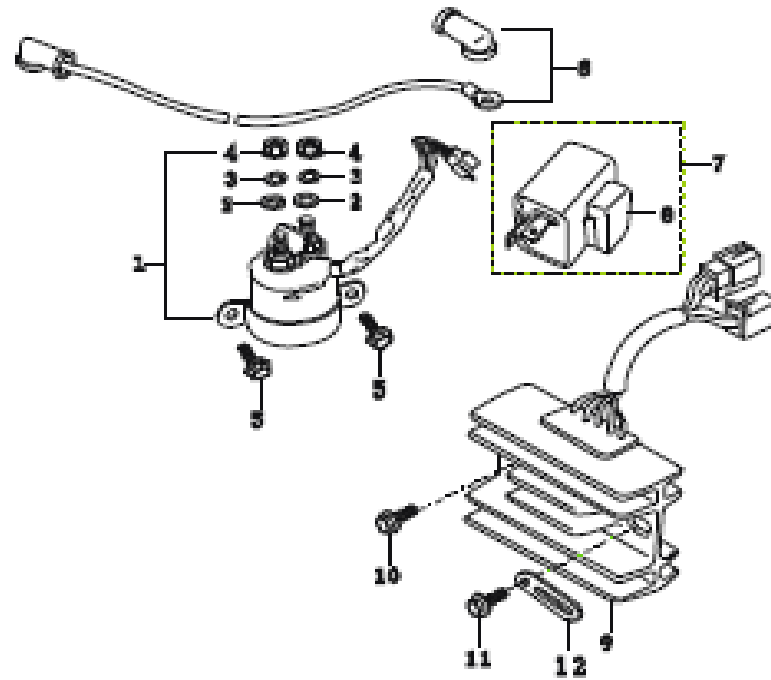 


FIG.5

Ref.No.	Part No.	Description
1	36610QNA2000	Wiring harness
2	<a href="#">07114Q011503</a>	Fuse 15A
3	36640QLZZ000	Diode
4	36651QKWZ000	Clip II
5	02304Q060122	Bolt M6×12
6	38501QLKK030	Horn assy 12V 3A
6A	38501QMN2000	Horn assy 12V1.5A
7	41890QLY2030	Bracket, horn
8	02304Q080162	Bolt M8×16
9	<a href="#">37011QNA2000</a>	Lock assy
10	<a href="#">37015QNA2000</a>	Switch assy, ignition
11	<a href="#">44025QMNZ050</a>	Cap, fuel tank
12	02304Q060202	Bolt M6×20
13	<a href="#">09407Q154002</a>	Band 7×150
14	<a href="#">09407Q254004</a>	Band 7×250
15	<a href="#">09407Q154007</a>	Clamp 4×150

FIG.5

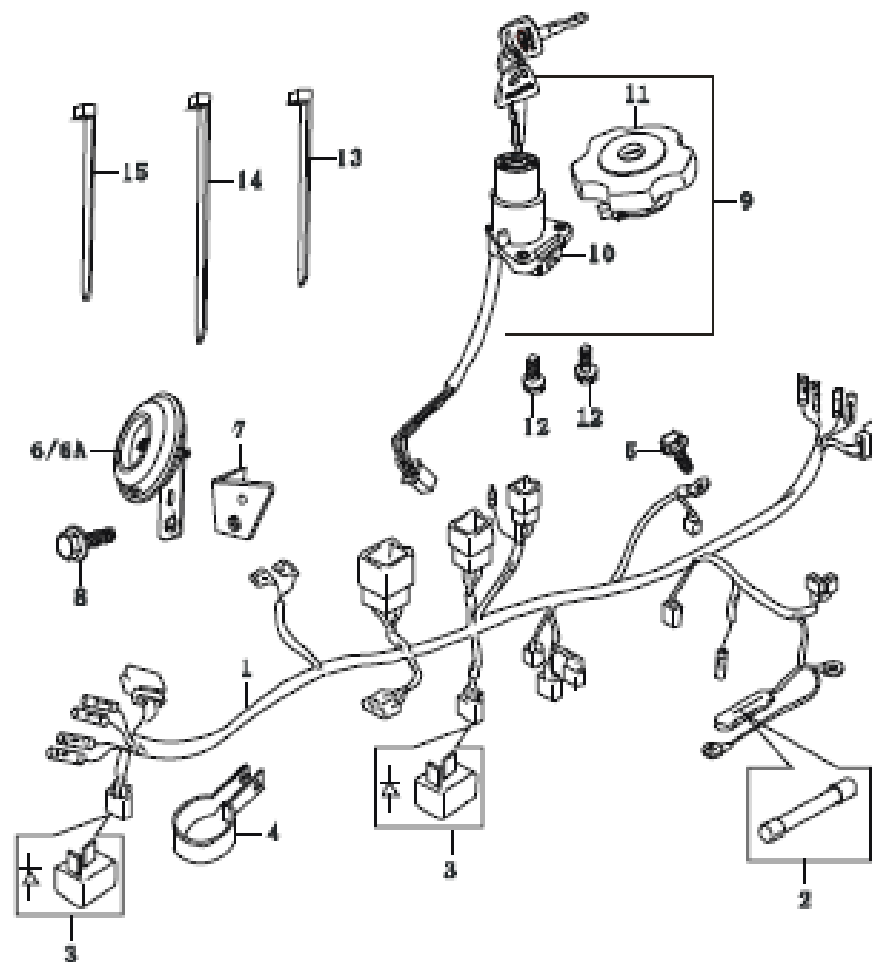 


FIG.6

Ref.No.	Part No.	Description
1	33601QMNZ000	Battery 12V 9AH
1A	33601QMN2000	Battery assy
2	41540QNA2000	Holder, battery
3	41530QNA2000	Plate, battery
4	33645QMNZ000	Rubber box, battery
5	02304Q060162	Bolt M6×16
6	09320Q080003	Cushion
7	33653QMD2000	Spacer
8	02304Q060202	Bolt M6×20
9	09404Q084001	Clip, clutch cable

FIG.6

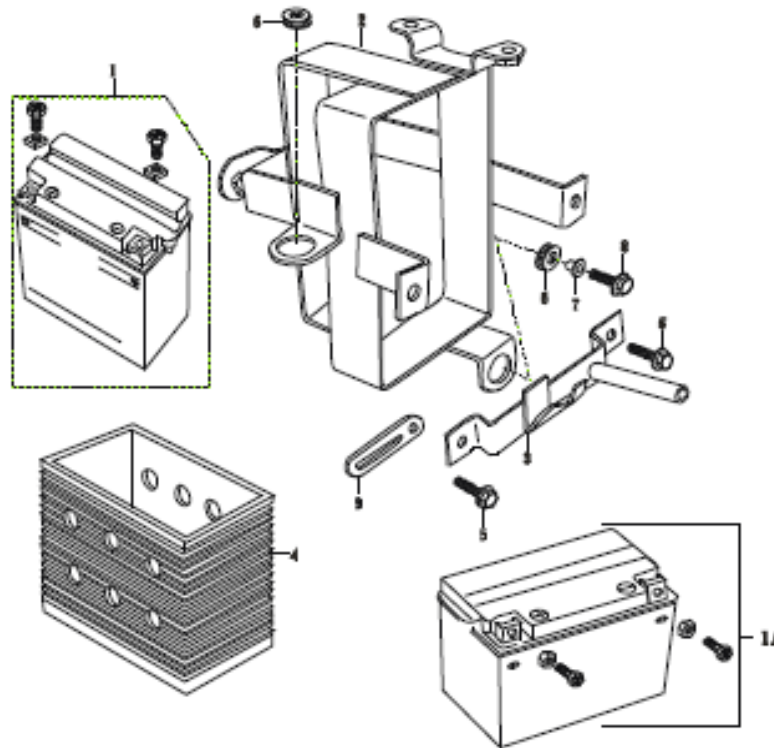 


FIG.7

Ref.No.	Part No.	Description
1	34011QMN2000	Speedometer assy
1A	34011QMN2050	Speedometer assy
2	34910QMN2000	Cable assy, speedmeter
2A	34910QMN2010	Cable assy, speedmeter
3	34950QMN2000	Bracket, speedmeter
3A	34950QMN2010	Bracket, speedmeter
3B	34950QLY2020	Bracket, speedmeter
4	02304Q060202	Bolt M6×20
5	02304Q060202	Bolt M6×20
5A	01604Q060251	Bolt M6×25
6	33644QAFZ000	Cushion 90×20×4
7	34191QMN2000	Gromit
8	34110QMN2000	Upper case, speedmeter
9	<a href="#">34014QMN2000</a>	<a href="#">Speedmeter</a>
9A	<a href="#">34014QMN2050</a>	<a href="#">Speedmeter</a>
10	34114QMN2000	Lower case, speedmeter
11	04010Q021201	Screw ST2.9×12
12	04010Q031201	Screw ST3.5×12
13	34170QMN2000	Wire assy, speedmeter
14	07112Q010101	Bulb, speedmeter 12V 2W
15	34192QMN2000	Bush
16	05420Q051051	Washer 5

FIG.7

 
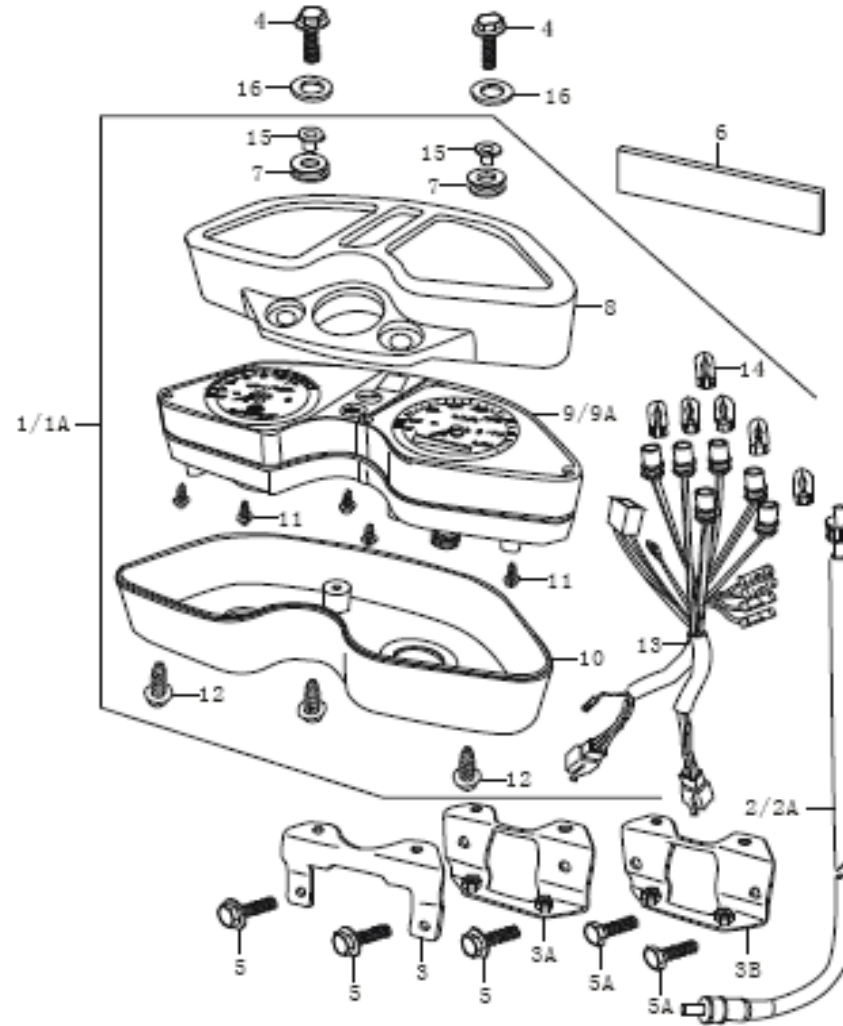 


FIG.8

HEADLAMP

Ref.No.	Part No.	Description
1	35101QMN2000	Headlamp assy
2	35012QMN2000	Reflector, head lamp
3	35165QMN2000	Cushion
4	07110Q003121	Bulb HS1
5	07110Q011121	Bulb, position W5W
6	35013QMN2000	Socket assy
7	35127QMN2000	Spring clamp
8	35194QMN2000	Clip, head lamp
9	04020Q020801	Screw ST2.9×8
10	05420Q011031	Washer 3
11	05420Q011044	Washer 4
12	51533QMN2000	Hinger
13	04411Q200501	Pin2×50
14	35157QMN2000	Nut
15	35163QMN2000	Spring
16	03411Q040704	Screw M4×70
17	09132Q040018	Screw ST4.2×13

FIG.8

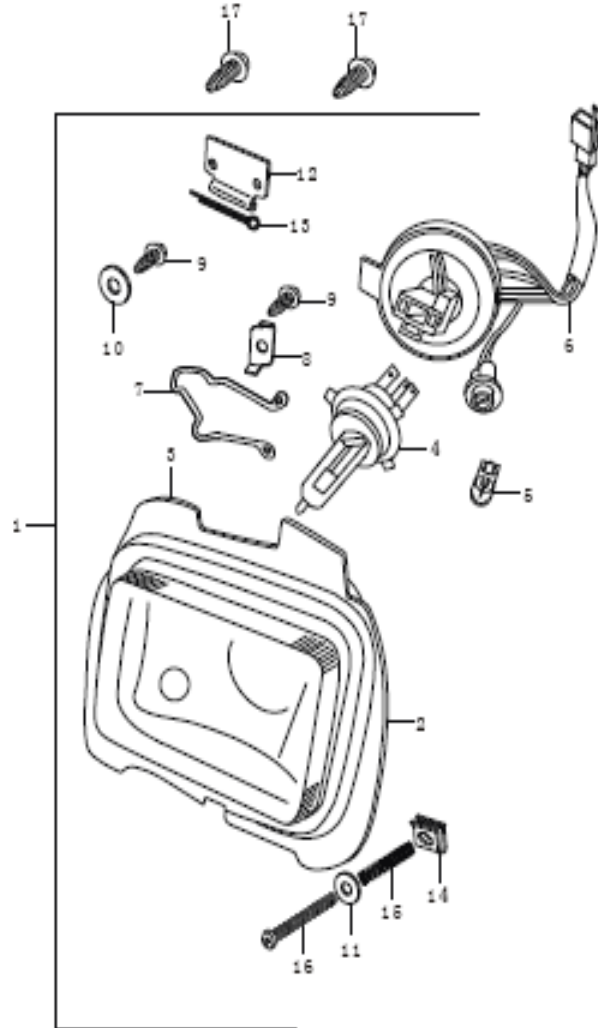 


**FIG.8A**

**HEADLAMP**

Ref.No.	Part No.	Description
1	35101QMN2010	Headlamp assy
2	35012QMN2010	Reflector, head lamp
3	09132Q040018	Screw ST4.2×13
4	07110Q003121	Bulb HS1
5	07110Q011121	Bulb, position W5W
6	35013QMN2010	Socket assy
7	35127QMN2010	Spring clamp
8	35194QMN2010	Clip, head lamp
9	04020Q020801	Screw ST2.9×8
10	05420Q011031	Washer 3


**FIG.8A**

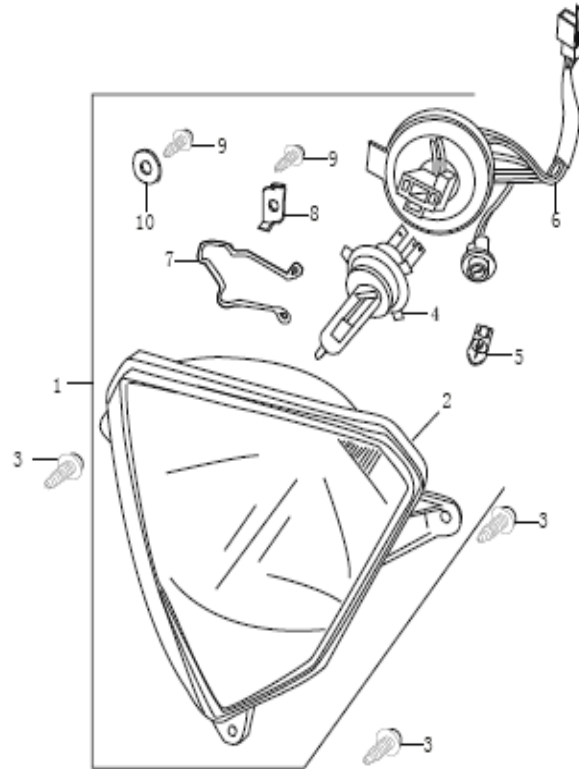

**FIG.9**

Ref.No.	Part No.	Description
1	35601QNA2000	Winker, front RH
2	35602QNA2000	Winker, front LH
3	35603QNA2000	Winker, rear RH
4	35604QNA2000	Winker, rear LH
5	35690QNA2000	Bracket, rear winker RH
5A	35690QNA2010	Bracket, rear winker
6	35890QNA2000	Bracket, rear winker LH
7	94520QNA2000	Bracket, RH
8	94560QNA2000	Bracket, LH
8A	35623QNA2010	Winker, front bracket
9	09159Q100002	Nut M10

**FIG.9**

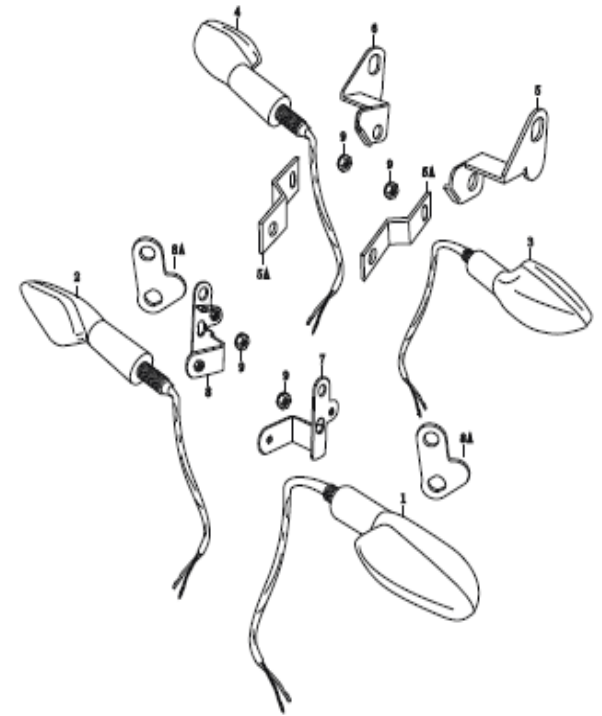 



**FIG.10**

Ref.No.	Part No.	Description
1	35071QMN2040	Tail lamp assy
2	35701QMN2000	Tail lamp assy
3	35712QMN2000	Lens, tail lamp
4	35713QMN2000	Seal , tail lamp
5	35714QMN2000	Body, rear lamp
6	35078QMN2000	Socket wire assy
7	07110Q007121	Bulb P21/5W
8	04010Q041804	Screw ST4.2×18
9	034110Q050124	Screw M5×12
10	05420Q011054	Washer 5
11	35761QMN2000	Clip, wir assy
12	04020Q031204	Screw ST3.5×12
13	35915QMN2000	Lens, license plate lamp
14	35916QMN2000	Seal, license plate lamp
15	07110Q011121	Bulb, license plate lamp
16	35918 QMN2000	Cushion 17×10×1
17	63112QMN2040	Rear fender II
18	63119QMN2000	Insulator
19	02304Q060252	Bolt M6×25
20	05420Q051061	Washer 6
21	35762QMN2000	Seal
22	09159Q060004	Nut M6
23	35902QMN2040	Reflector, rear
24	09630Q393201	Reflector, rear 64×39
25	05420Q021054	Washer 5
26	05401Q012054	Nut M5
27	09169Q060012	Washer
28	09320Q080002	Cushion 08007
29	33644QAFZ000	Cushion


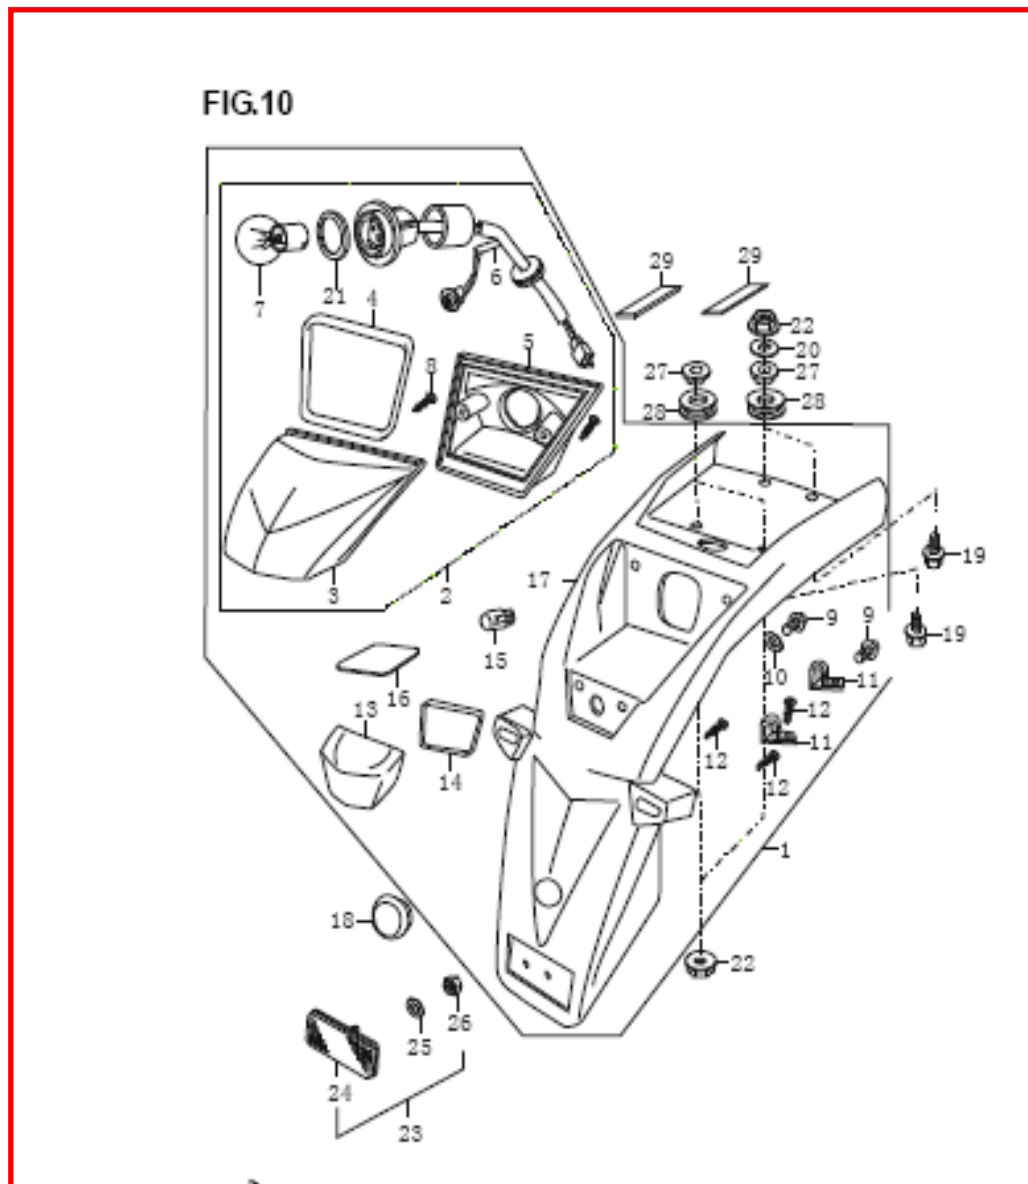 



FIG.10A

Ref.No.	Part No.	Description
1	35071QMN2060	Tail lamp assy
2	35702QMN2010	Tail lamp assy
3	35712QMN2000	Lens, tail lamp
4	35713QMN2000	Seal , tail lamp
5	35714QMN2000	Body, rear lamp
6	35078QMN2010	Socket wire assy
7	35720QMN2010	LED lamp
8	04010Q041804	Screw ST4.2×18
9	034110Q050124	Screw M5×12
10	05420Q021054	Washer 5
11	35761QMN2000	Clip, wir assy
12	04010Q041204	Screw ST4.2×12
13	35915QMN2000	Lens, license plate lamp
14	35917QMN2000	Seal, license plate lamp
15	07110Q011121	Bulb, license plate lamp
16	35918 QMN2000	Cushion 17×10×1
17	63112QMN2040	Rear fenderll
18	63119QMN2000	Insulator
19	02304Q060252	Bolt M6×25
20	05420Q051061	Washer 6
21	35762QMN2000	Seal
22	09159Q060004	Nut M6
23	35902QMN2040	Reflector, rear
24	09630Q393201	Reflector, rear 64×39
25	05420Q021054	Washer 5
26	05401Q012054	Nut M5
27	35714QMN2010	Reflector, LED lamp
28	09169Q060012	Washer
29	09320Q080002	Cushion 08007
30	48114QAFZ000	Cushion

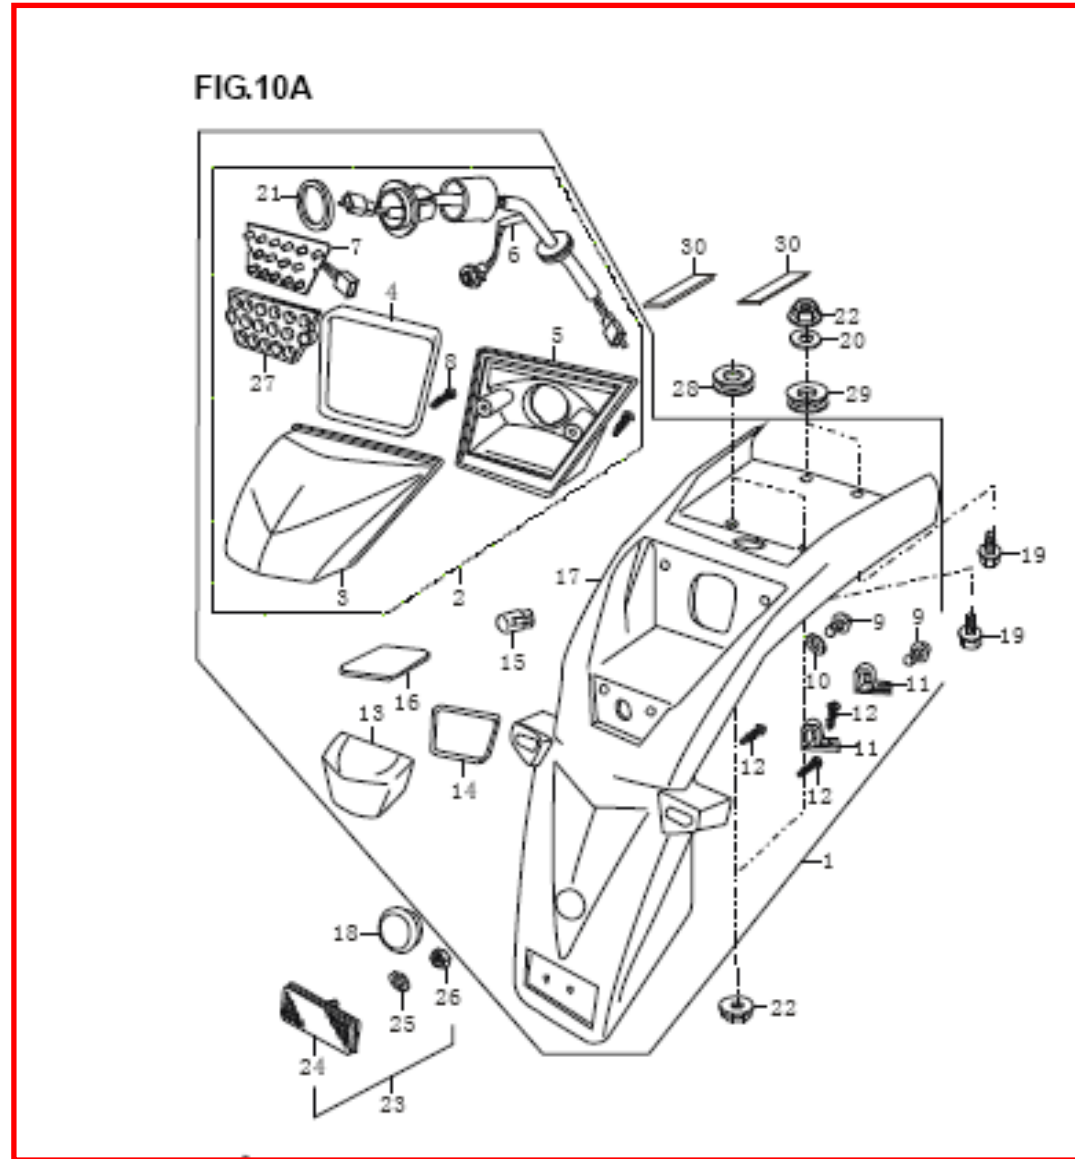 

**FIG.11**

Ref.No.	Part No.	Description
1	56110QMN2000	Handlebar assy
2	57211QMN2000	Grip, LH
3	37400QMN2080	Switch assy. LH handle
4	03451Q050323	Screw M5×32
5	03451Q050403	Screw M5×40
6	57500QMN2000	Lever assy, LH, clutch
7	57431QLG1080	Bolt
8	57511QLG1080	Braket, lever LH
9	57621QLG1080	Lever, LH
10	57460QLG1000	Switch, clutch
11	57542QLG1000	Adjuster, cable
12	57541QLG1000	Nut
13	02104Q060253	Bolt M6×25
14	57361QLG1000	Upper case
15	03421Q030084	Scwer M3×8.3
16	05421Q011063	Lock washer 6
17	05411Q011063	Nut M6
18	37200QLY2000	Switch assy. RH handle
19	03451Q050203	Screw M5×20
20	03451Q050163	Screw M5×16
21	57110QMN2000	Grip, RH throttle
22	58200QNA2000	Cable assy, clutch
23	04721Q060141	Shaft 6×14
24	04411Q200161	Pin 2×16
25	58301QMN2000	Cable assy, throttle upper
26	56601QNA2000	Mirror assy, rear view LH
27	56501QNA2000	Mirror assy, rear view RH
28	56521QKG3000	Boot , lower
29	56534QMN2000	Nut
30	57173QMN2000	Rubber protector, handlebar

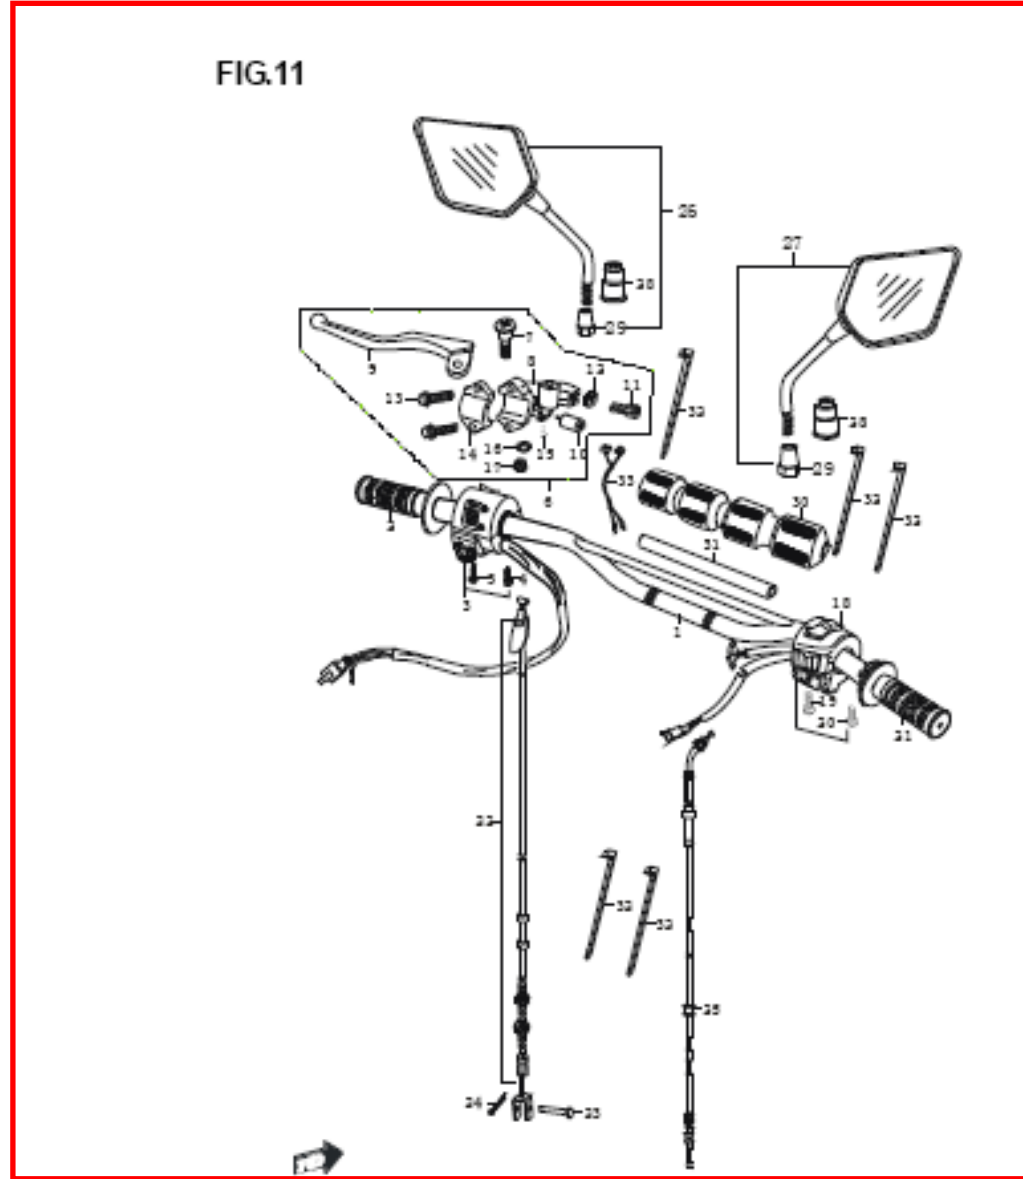 

**FIG.11**

31	57174QMN2000	Protector tube, handlebar
32	09407Q154007	Clamp 4×150
33	57550QMN2000	Cable assy, clutch switch

**FIG.11A**

Ref.No.	Part No.	Description
1	56111QMN2030	Handlebar assy
2	57211QMN2000	Grip, LH
3	37400QMN2080	Switch assy. LH handle
4	03451Q050323	Screw M5×32
5	03451Q050403	Screw M5×40
6	57500QMN2000	Lever assy, LH, clutch
7	57431QLG1080	Bolt
8	57511QLG1080	Braket, lever LH
9	57621QLG1080	Lever, LH
10	57460QLG1000	Switch, clutch
11	57542QLG1000	Adjuster, cable
12	57541QLG1000	Nut
13	02104Q060253	Bolt M6×25
14	57361QLG1000	Upper case
15	03421Q030084	Scwer M3×8.3
16	05421Q011063	Lock washer 6
17	05411Q011063	Nut M6
18	37200QMNZ030	Switch assy. RH handle
18A	37200QLY2000	Switch assy. RH handle
19	03451Q050203	Screw M5×20
20	03451Q050163	Screw M5×16
21	57110QMN2000	Grip, RH throttle
22	58200QNA2000	Cable assy, clutch
23	04721Q060141	Shaft 6×14
24	04411Q200161	Pin 2×16

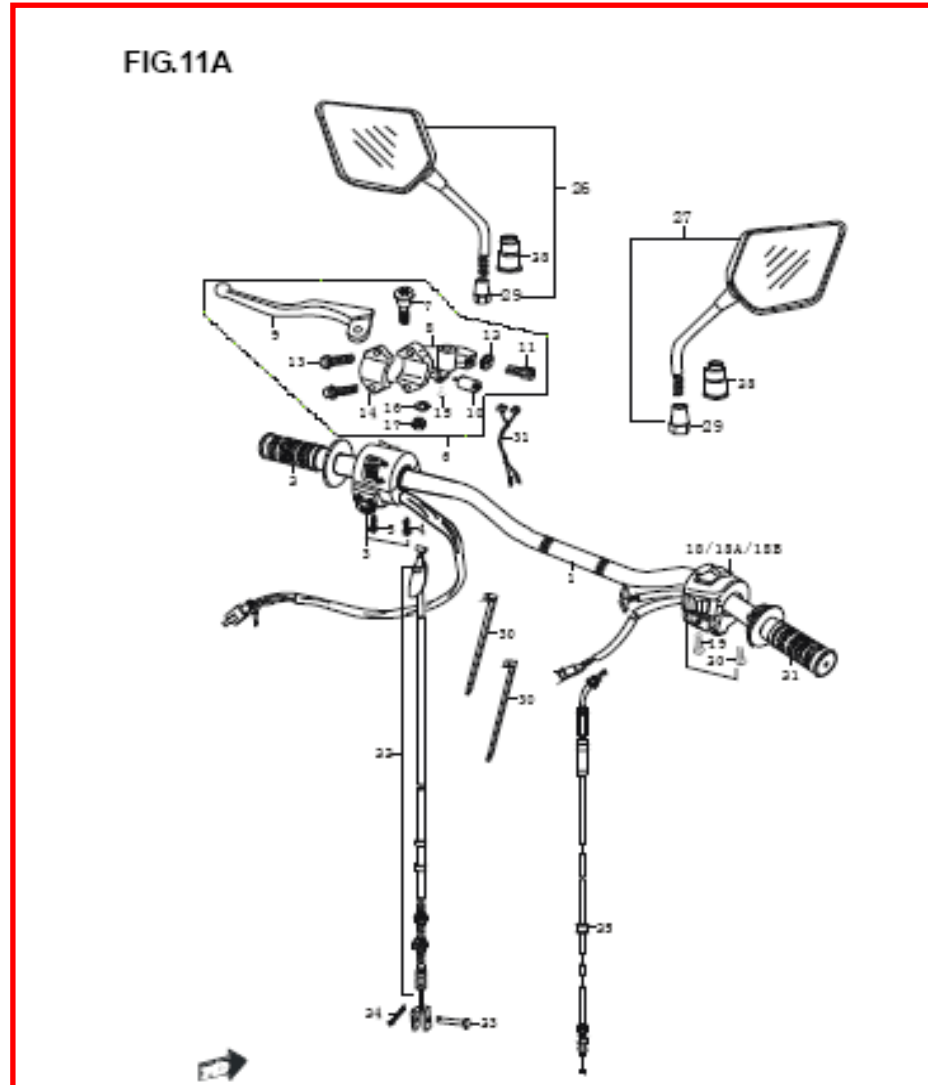 


FIG.11A

25	58301QMN2000	Cable assy, throttle upper
26	56601QNA2000	Mirror assy, rear view LH
27	56501QNA2000	Mirror assy, rear view RH
28	56521QKG3000	Boot , lower
29	56534QMN2000	Nut
30	09407Q154007	Clamp 4×150
31	57550QMN2000	Cable assy, clutch switch

FIG.12

Ref.No.	Part No.	Description
1	59002QNA2000	Disk brake assy
2	59600QMN2000	Master cylinder assy
3	59667QMN2000	Diaphragm, seal
4	59668QMN2000	Gasket
5	59669QMN2000	Cap, reservoir
6	03421Q040123	Screw M4×12
7	57421QMN2000	Lever, brake
8	57431QMN2000	Screw
9	05409Q041063	Nut M6
10	59671QMN2000	Holder
11	02104Q060243	Bolt M6×24
12	57460QMN2000	Switch assy, stop lamp
13	03411Q340123	Screw M4×12
14	59480QMN2000	Hose, front brake
15	59491QMN2000	Bolt
16	59493QMN2000	Washer
17	59300QNA2000	Caliper, front brake
18	59330QNA2000	Friction piece assy, inside
19	59340QNA2000	Friction piece assy, outside
20	59315QNA2000	Spring, pad
21	02304Q080322	Bolt M8×32
22	59483QMN2000	Gromit

FIG.12


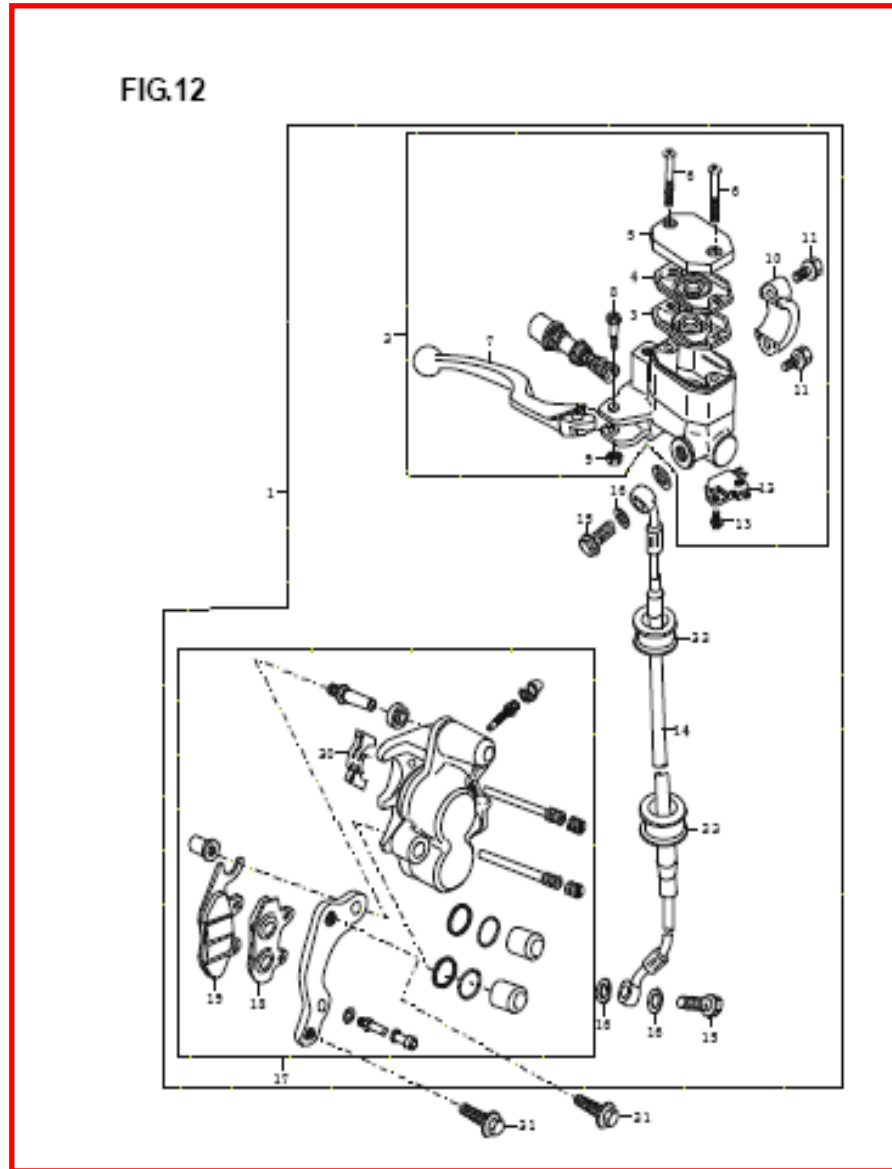 


FIG.12A

Ref.No.	Part No.	Description																								
1	59002QNA2010	Disk brake assy																								
2	59600QMN2000	Cylinder assy, master																								
3	59668QMN2000	Gasket																								
4	59667QMN2000	Diaphragm, seal																								
5	59669QMN2000	Cap, reservoir																								
6	03421Q040123	Screw M4×12																								
7	57421QMN2000	Lever, brake																								
8	57431QMN2000	Screw																								
9	05409Q041063	Nut M6																								
10	59671QMN2000	Holder																								
11	02104Q060243	Bolt M6×24																								
12	57460QMN2000	Switch assy, stop lamp																								
13	03411Q340123	Screw M4×12																								
14	59480QMN2010	Hose, front brake	15	59491QMN2000	Bolt	16	59493QMN2000	Washer	17	59300QNA2010	Caliper, front brake	18	59330QNA2000	Friction piece assy, inside	19	59340QNA2000	Friction piece assy, outside	20	59315QNA2000	Spring, pad	21	02304Q080345	Bolt M8×34	22	59483QMN2000	Gromit
15	59491QMN2000	Bolt																								
16	59493QMN2000	Washer																								
17	59300QNA2010	Caliper, front brake																								
18	59330QNA2000	Friction piece assy, inside																								
19	59340QNA2000	Friction piece assy, outside																								
20	59315QNA2000	Spring, pad																								
21	02304Q080345	Bolt M8×34																								
22	59483QMN2000	Gromit																								

FIG.12A

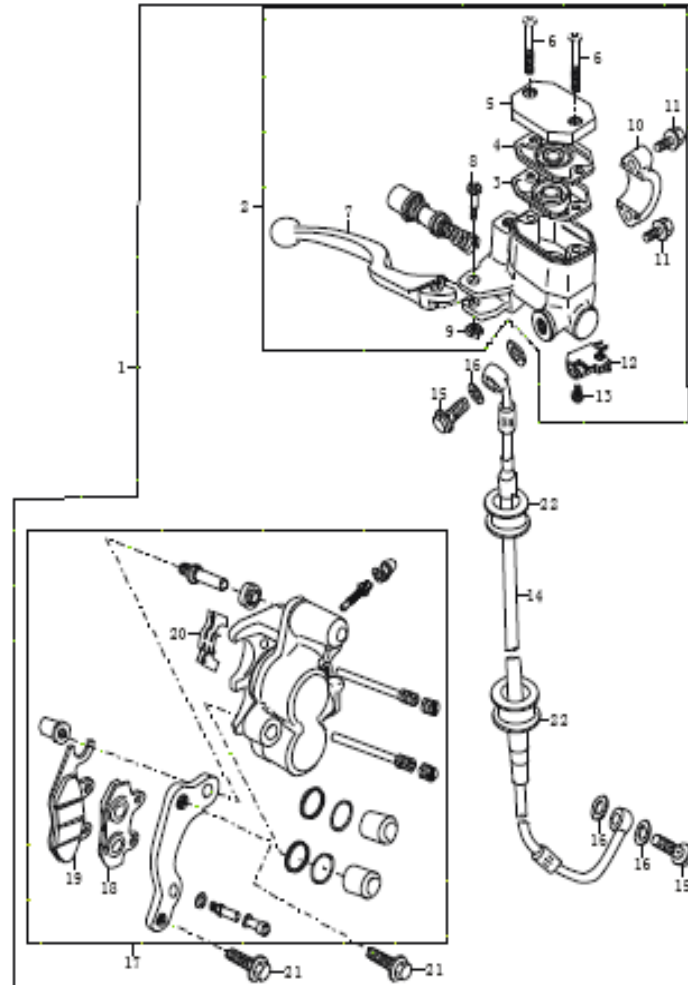 

**FIG.13**

 
 
 
Ref.No.	Part No.	Description
1	94411QMN2000	Cowling assy
2	94497QMN2000	Cover, front lamp
3	94551QMN2000	Braket, cowling
3A	94551QLY2020	Braket, cowling
4	09132Q040018	Screw ST4.2×13
5	02304Q060162	Bolt M6×16
6	09320Q050001	Cushion 05006
7	09169Q060003	Washer

**FIG.13A**

Ref.No.	Part No.	Description
1	94411QMN2010	Cowling assy
1A	94411QLY2250	Cowling assy
2	94518QMN2010	Rubber strip

**FIG.14**

Ref.No.	Part No.	Description
1	47346QMNZ000	Fuel tank cover, LH
2	47343QMNZ000	Fuel tank cover, RH
3	09124Q060008	Screw M6×16
4	09148Q060001	Nut M6
5	33653QMD2000	Set
6	09320Q080002	Cushion 08007
7	09169Q060002	Washer

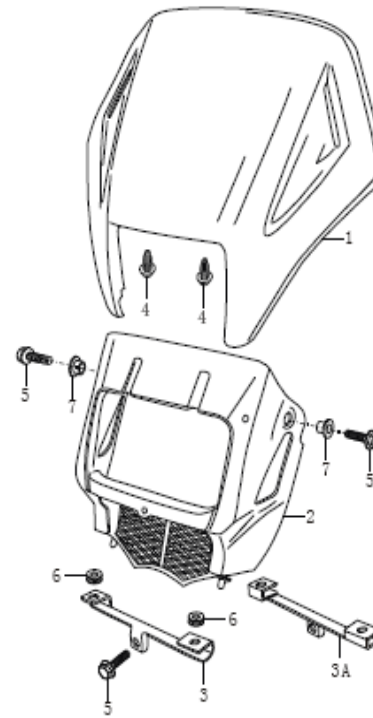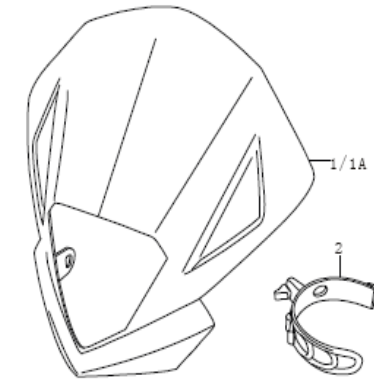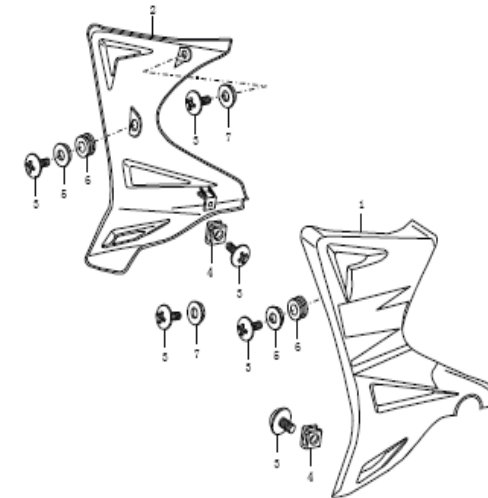**FIG.13****FIG.13A****FIG.14**

 


**FIG.14A**

**FUEL TANK COVER**

Ref.No.	Part No.	Description
1	47346QMN2010	Fuel tank cover, LH
2	47343QMN2010	Fuel tank cover, RH
3	09124Q060008	Screw M6×16
4	09124Q060007	Screw M6×25
5	09301Q060004	Spacer
6	09320Q080002	Cushion 08007
7	09169Q060002	Washer
8	05420Q051061	Washer 6
9	09148Q060001	Nut M6

**FIG.14A**

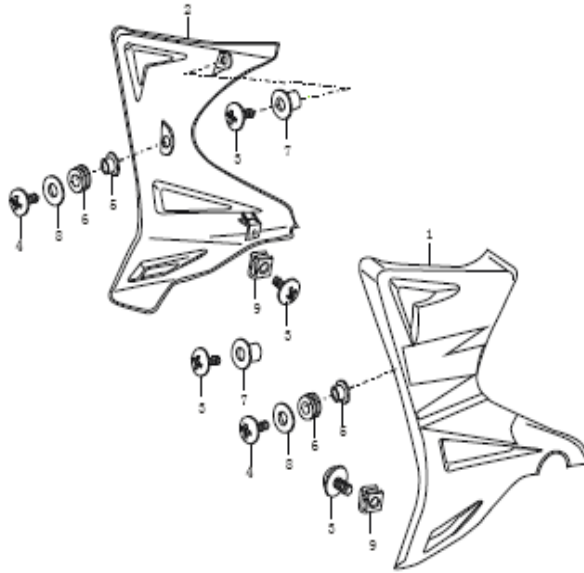

**FIG.15**

Ref.No.	Part No.	Description
1	47211QMNZ000	Cover LH body
1A	47211QMN2010	Cover LH body
2	47111QMNZ000	Cover RH body
2A	47111QMN2010	Cover RH body
3	09124Q060008	Screw M6×16
4	01102Q060201	Bolt M6×20
5	09169Q060002	Washer
6	47113QMNZ000	Cover, thermal protect

**FIG.15**

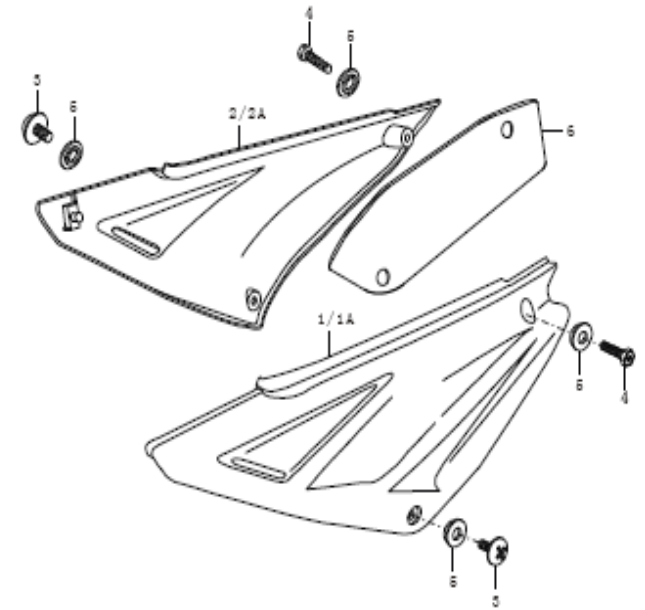 




FIG.16

Ref.No.	Part No.	Description
1	47337QNA2000	Tail cover
1A	47337QNA2010	Tail cover
2	01604Q060251	Bolt M6×25
3	05420Q051061	Washer 6
4	09320Q090006	CushionII
5	09148Q060001	Clip nut M6
6	09169Q060009	Bush
7	33645QAFZ000	Cushion 60×32×18
8	63411QAFZ000	Cushion40×20×10
9	47312QMN2000	Plate, Tail cover
10	09124Q060024	Screw M6×16


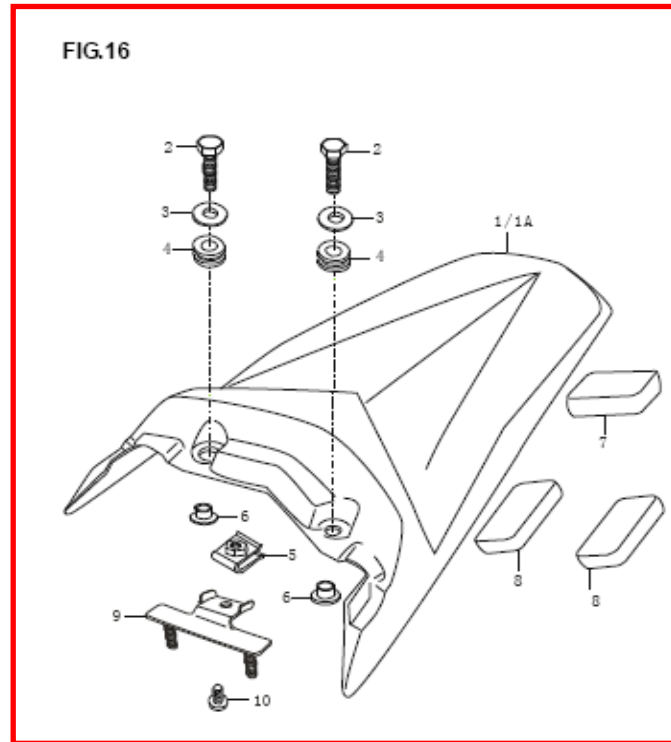 


FIG.17


Ref.No.	Part No.	Description
1	41100QNA2000	Body comp, frame
2	09600Q000006	Frame brand plate
3	05011Q200050	Rivet 2×5
4	41991QNA2000	Plate, engine mounting,
5	02304Q080501	Bolt M8×50
6	05409Q081081	Nut M8
7	41980QNA2000	Plate, engine mounting,
8	02304Q080651	Bolt M8×65
9	41390QNA2000	Plate, lower
10	02304Q080721	Bolt M8×72
11	02304Q100201	Bolt M10×20
12	01504Q081381	Bolt M8×138
13	09319Q080002	Cushion assy I
14	09404Q084001	Clip, clutch cable
15	61274QMNZ000	Block, upper
16	<a href="#">61021QMNZ000</a>	Block, nether
17	01604Q060351	Bolt M6×35
18	05420Q051061	Washer 6
19	09159Q060004	Nut M6
20	<a href="#">48611QMNZ000</a>	Cover, protect
21	09320Q080002	Cushion 08007
22	33653QMD2000	Bush
23	02304Q060202	Bolt M6×20
24	11847QLAZ110	Clip
25	<a href="#">41266QNA2000</a>	Plate, cover RH body
26	<a href="#">02304Q060162</a>	Bolt M6×16

FIG.17

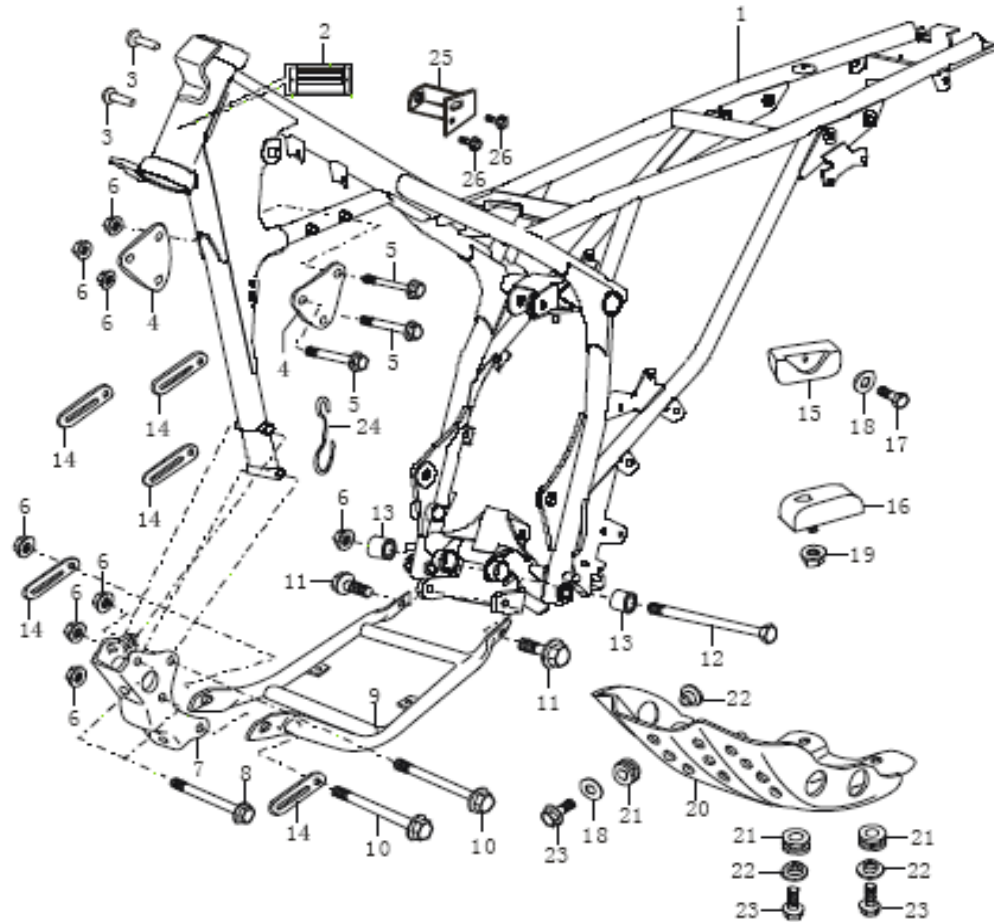 


**FIG.18**

Ref.No.	Part No.	Description
1	42310QMN2040	Stand comp, side
2	42331QLYZ000	Spring
3	42332QLYZ010	Spring
4	42333QMN2000	Bolt M10×29
5	09159Q100001	Nut M10
6	37803QLY2030	Stop switch
7	03451Q050151	Screw M5×15

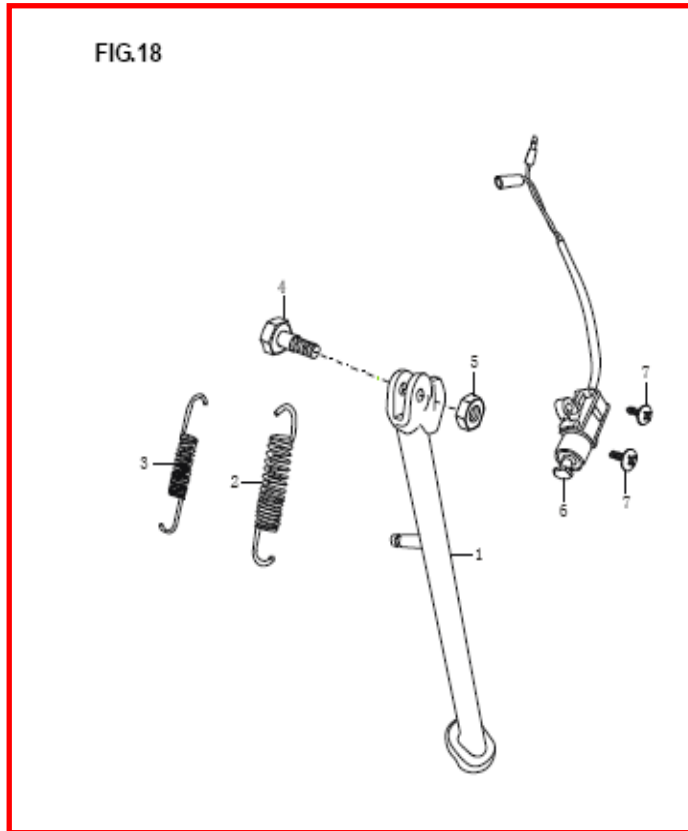 

**FIG.19**


Ref.No.	Part No.	Description
1	44110QMNZ000	Tank comp
2	44348QMNZ000	Seal
3	44300QMNZ000	cock assy, fuel tank
4	01102Q060201	Bolt M6×20
5	09168Q060001	Seal 6
6	B15538	Hose 5×9
7	09401Q084002	Clamp φ8
8	09329Q100001	Cushion, front
9	01504Q080401	Bolt M8×40
10	44517QMN2000	Spacer
11	44541QMN2000	Rubber, fule tank
12	44515QMN2000	Board
13	44542QMNZ000	Cushion, rear
14	09320Q080003	Cushion
15	44320QMNZ000	Element I
16	44330QMNZ000	Element II

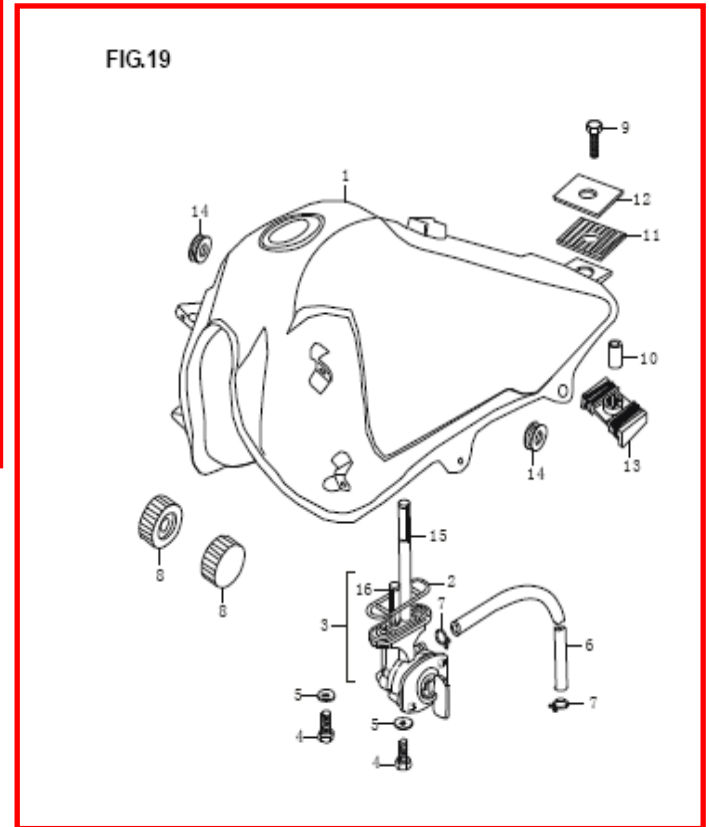 


**FIG.20**

Ref.No.	Part No.	Description
1	45101QMN2000	Seat assy
1A	45101QMNZ000	Seat assy
2	05401Q011064	Nut M6
3	05421Q011064	Washer 6
4	05420Q011064	Washer 6
5	45116QMNZ000	Bracket

**FIG.20**

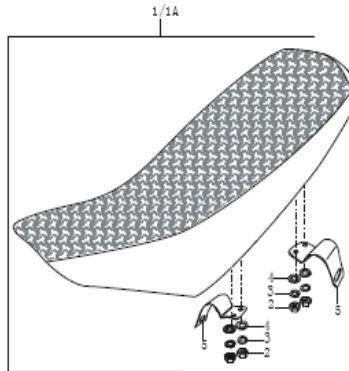 


**FIG.21**

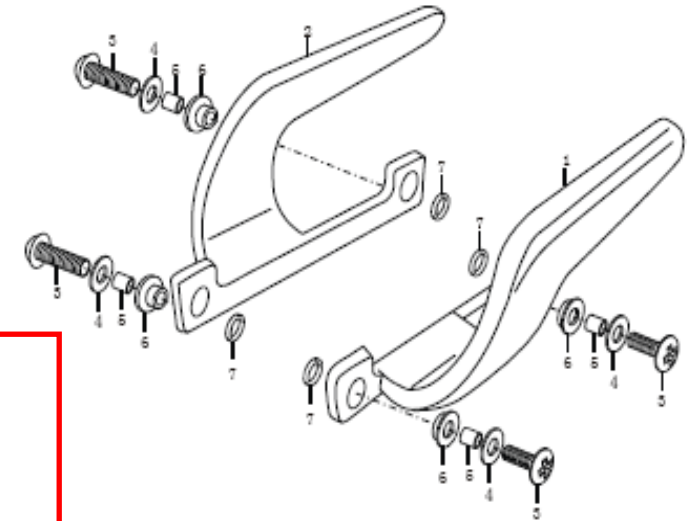 

**FIG.21**

Ref.No.	Part No.	Description
1	46441QMN2000	Rear carrier, LH
2	46411QMN2000	Rear carrier, RH
3	03644Q008408	Screw M8×40
4	05420Q051081	Washer 8
5	09180Q080007	Bush
6	09320Q100001	Gromit
7	09320Q100005	Washer

**FIG.21A**

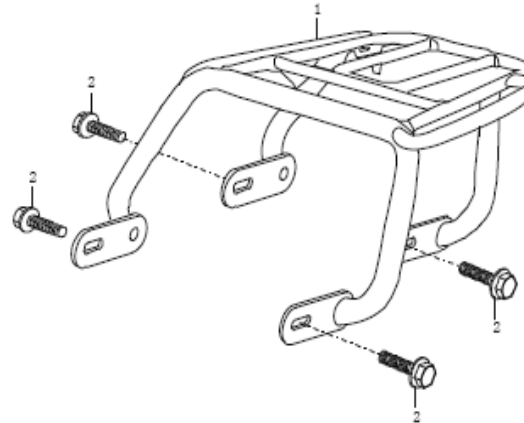 

**FIG.21A**

Ref.No.	Part No.	Description
1	46310QMN2200	Carrier comp, rear
2	02304Q080302	Bolt M8×30

**FIG.22**

Ref.No.	Part No.	Description
1	53111QMN2000	Front fender
2	02304Q060202	Bolt M6×20
3	05420Q051061	Washer 6
4	33653QMD2000	Bush
5	09320Q080002	Gromit 08007
6	53121QNA2000	Bracket
7	63119QMN2000	Insulator

**FIG.22A**

Ref.No.	Part No.	Description
1	53111QLY2250	Front fender
1A	53111QMN2010	Front fender
2	02304Q060202	Bolt M6×20
3	05420Q051061	Washer 6
4	33653QMD2000	Bush
5	09320Q080002	Gromit 08007

**FIG.23**

Ref.No.	Part No.	Description
1	63111QMNZ000	Front portion, rear fender
2	02304Q060162	Bolt M6×16
3	09169Q060003	Washer
4	09159Q060004	Nut M6
5	02304Q060122	Bolt M6×12

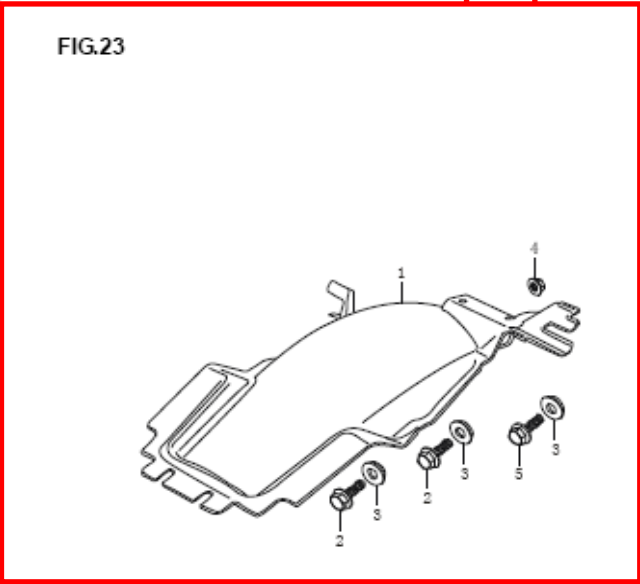 
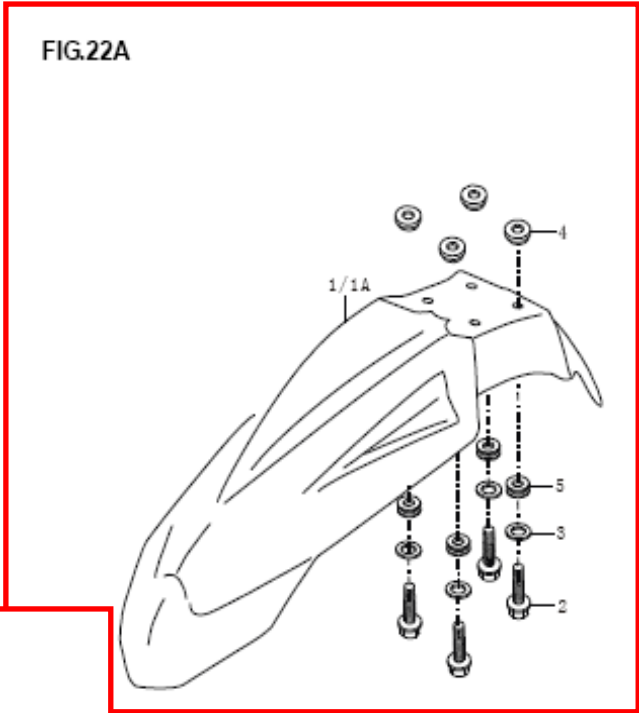 
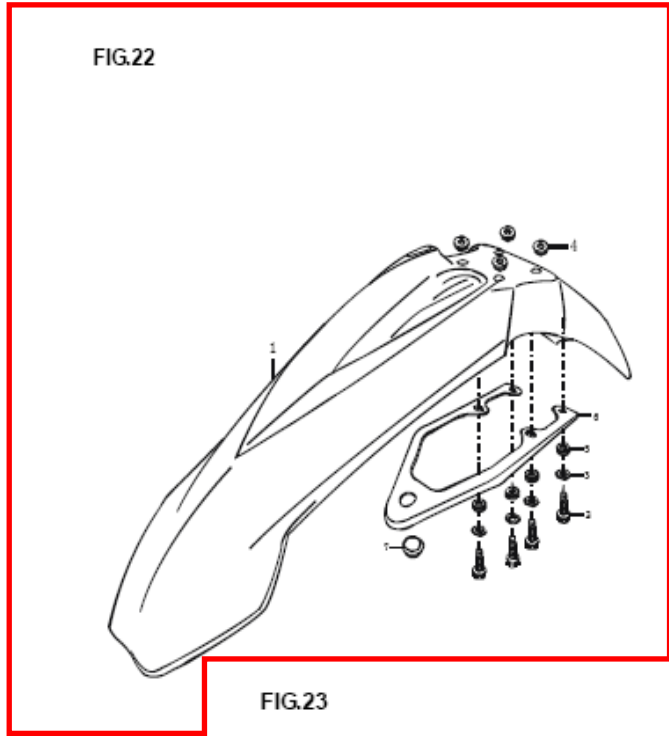 


FIG.24

Ref.No.	Part No.	Description
1	43503QNA2000	Footrest assy, front LH
2	43520QNA2000	Bracket, footrest front LH
3	43540QMN2000	Footrest, front LH
4	43574QMN2000	Pin
5	43571QMN2000	Spring
6	43575QMN2000	Circlip
7	43502QNA2000	Footrest assy, front RH
8	43510QNA2000	Bracket, footrest front RH
9	43530QMN2000	Footrest, front RH
10	09103Q120006	Bolt M12×30×1.25
11	43579QMN2000	Washer 8
12	43720QMN2000	Bracket, footrest rear LH
13	43620QMN2070	Bracket, footrest rear RH
14	02304Q080202	Bolt M8×20
15	43061QMD2000	Footrest, rear
16	43610QLAZ000	Stand, rear footrest
17	43612QLAZ000	Rubber
18	09160Q190001	Washer 19.5
19	04721Q060321	Pin 6×32 -B
20	04411Q200201	Cotter pin 2×20

 
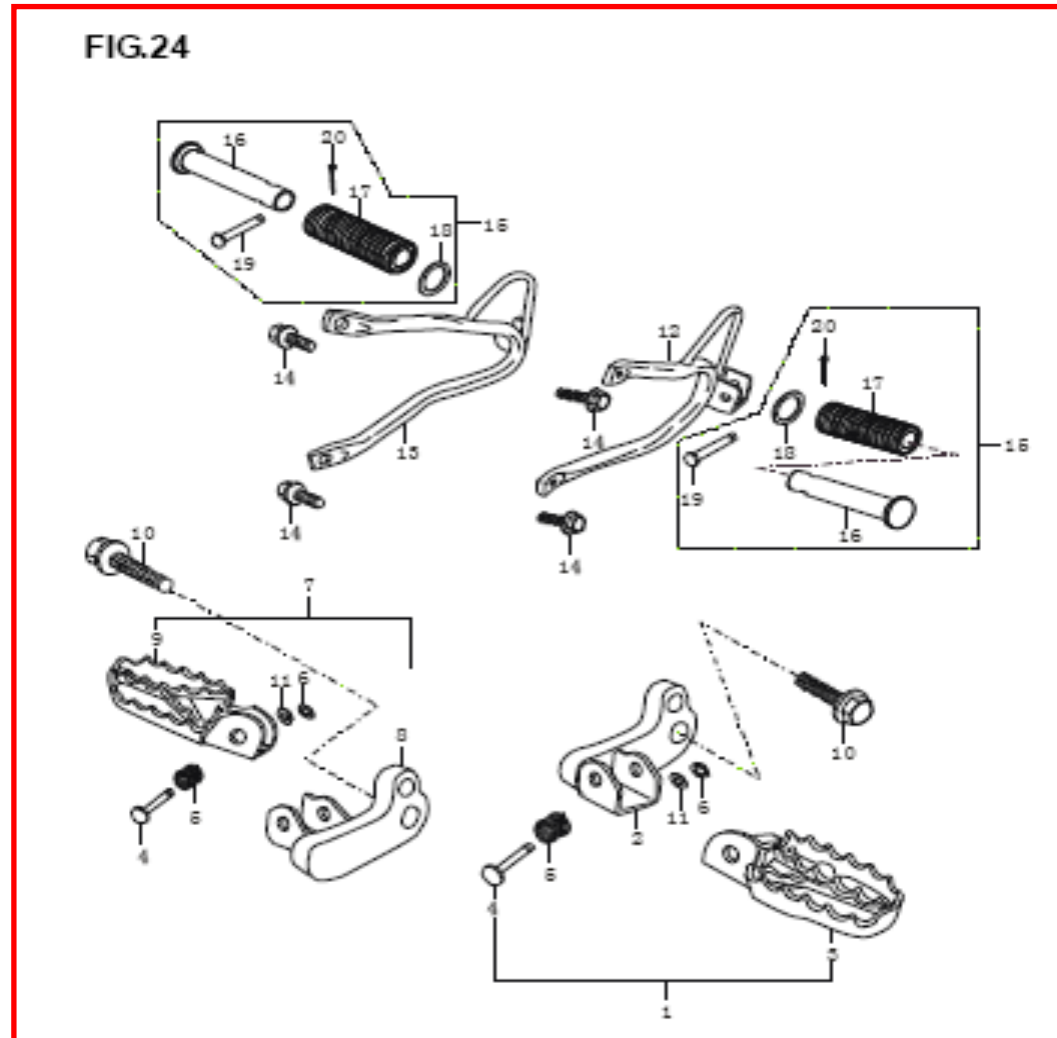 


FIG.24A

Ref.No.	Part No.	Description
1	43503QNA2000	Footrest assy, front LH
2	43520QNA2000	Bracket, footrest front LH
3	43540QMN2000	Footrest, front LH
4	43574QMN2000	Pin
5	43571QMN2000	Spring
6	43575QMN2000	Circlip
7	43502QNA2000	Footrest assy, front RH
8	43510QNA2000	Bracket, footrest front RH
9	43530QMN2000	Footrest, front RH
10	09103Q120006	Bolt M12×30×1.25
11	43579QMN2000	Washer 8
12	43720QMN2180	Bracket, footrest rear LH
13	43620QNA2010	Bracket, footrest rear RH
14	02304Q080202	Bolt M8×20
15	43702QMN2180	Footrest L, rear
16	43602QNA2010	Footrest R, rear
17	43711QMM4000	Footrest L
18	43611QMM4000	Footrest R
19	09208Q060002	Pin
20	43655QMM4000	Spacer
21	43656QMM4000	Washer
22	43657QMM4000	Spring
23	05450Q003011	Ball 5
24	05430Q041041	Circlip

 
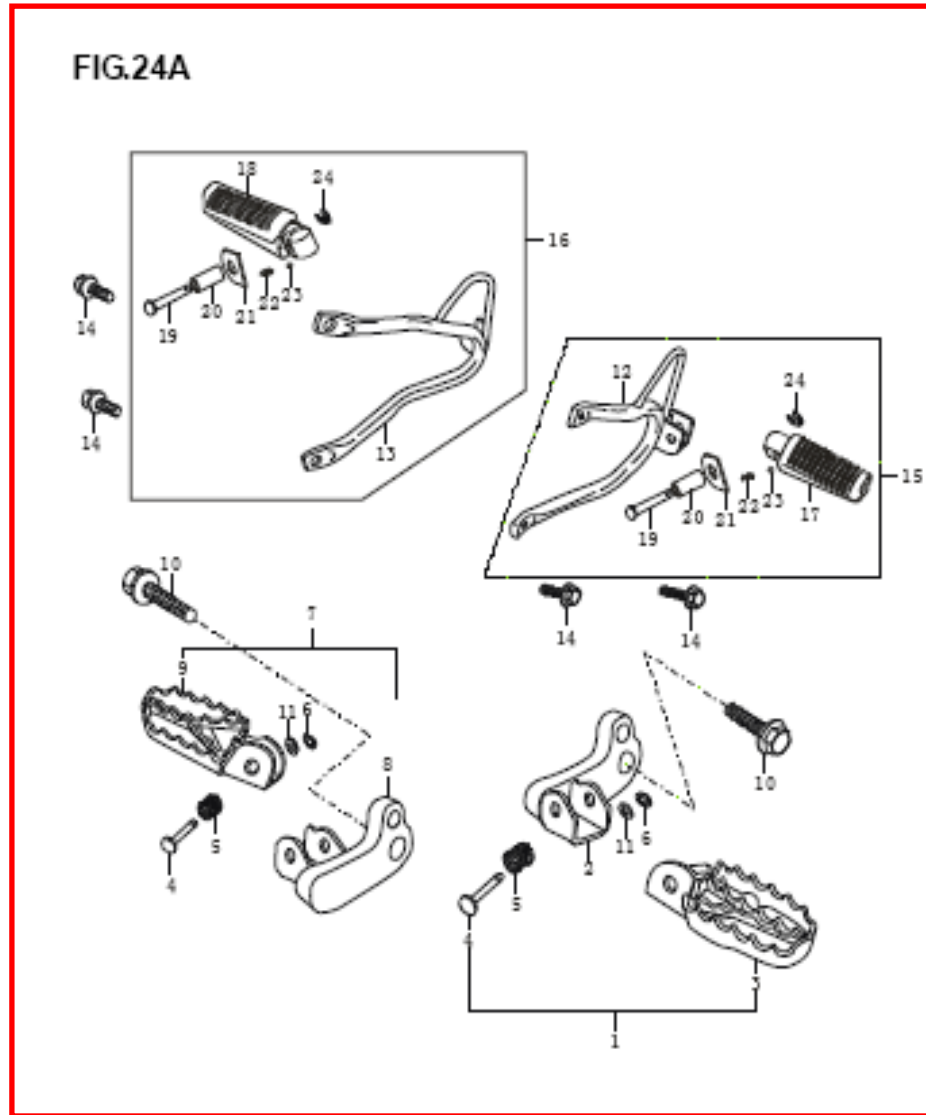 


**FIG.25**

Ref.No.	Part No.	Description
1	51311QMN2000	Plate, steering
2	02304Q100455	Bolt M10×45
3	56211QMNZ000	Holder, handle upper
4	02105Q080401	Bolt M8×40
5	59446QMN2000	Clamp, brake hose I

**FIG.25A**

Ref.No.	Part No.	Description
1	51311QMN2010	Head, steering stem
2	02504Q100451	Bolt M10×45
3	56211QMNZ050	Holder, handle upper
4	02104Q080351	Bolt M8×35
5	59446QMN2000	Clamp, brake hose I

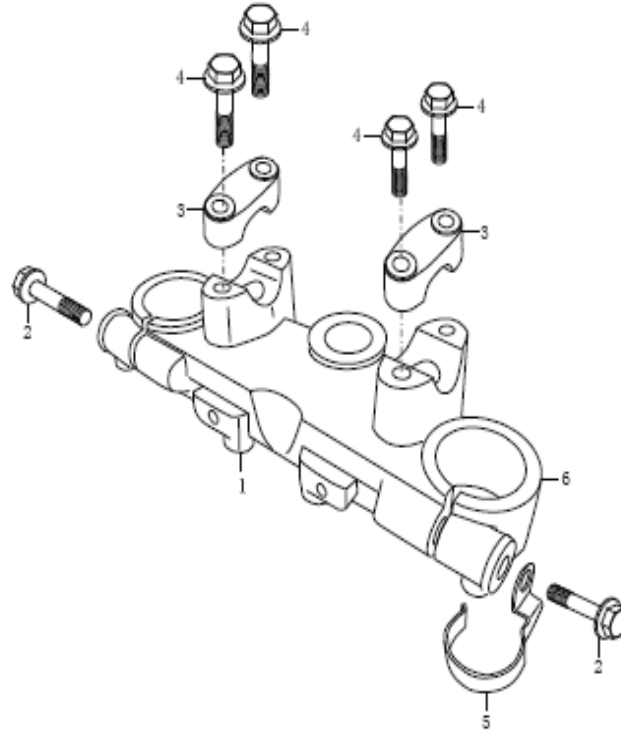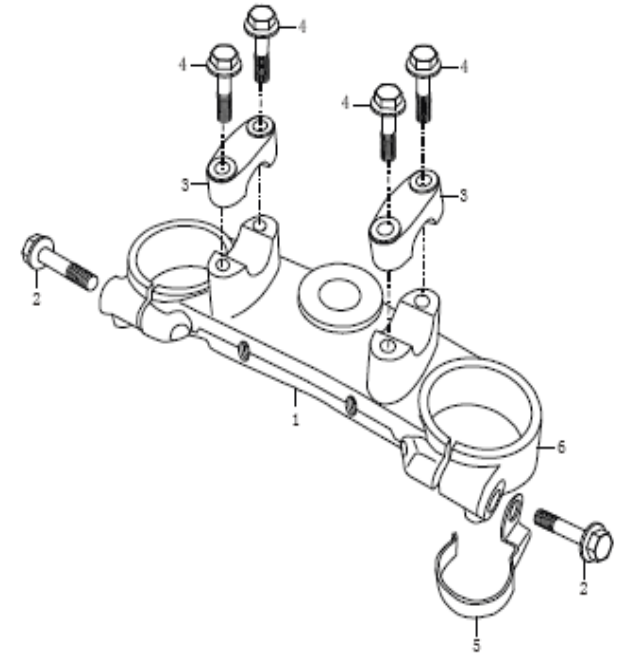
**FIG.25****FIG.25A**




**FIG.26**

Ref.No.	Part No.	Description
1	51410QNA2000	Steering stem
2	51358QMNZ000	Nut
3	51356QMNZ000	Washer
4	51631QMNZ000	Nut
5	51643QMNZ000	Dust seal
6	05610Q030205	Bearing 30205
7	05610Q32006X	Bearing 32006X
8	51640QMNZ000	Dust cover
9	02304Q100455	Bolt M10×45
10	59468QMN2000	Clamp, brake hose II
11	35091QKMZ000	Reflex reflector comp
12	05420Q011064	Washer 6
13	05401Q012064	Nut M6

**FIG.26**

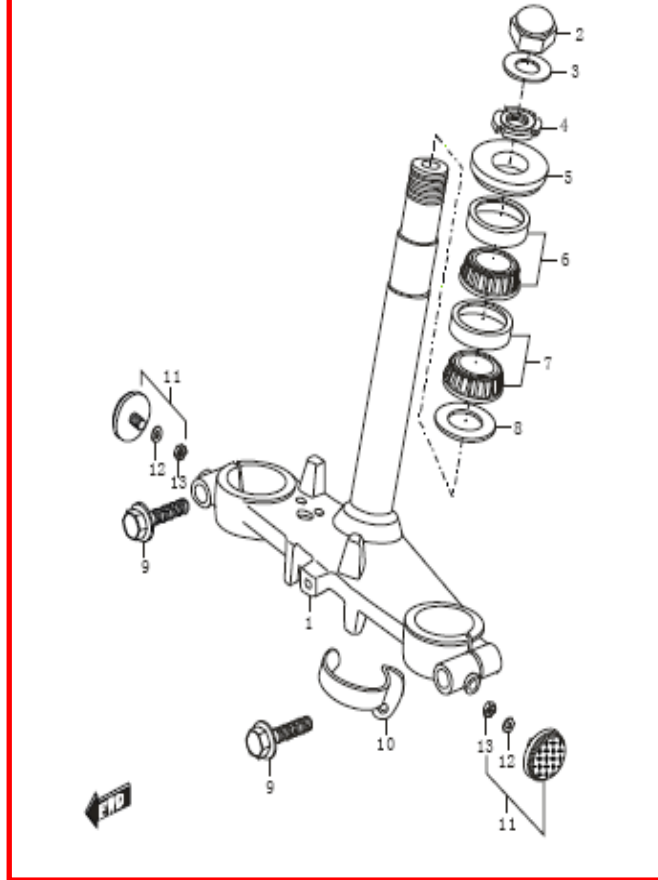 

**FIG.26A**

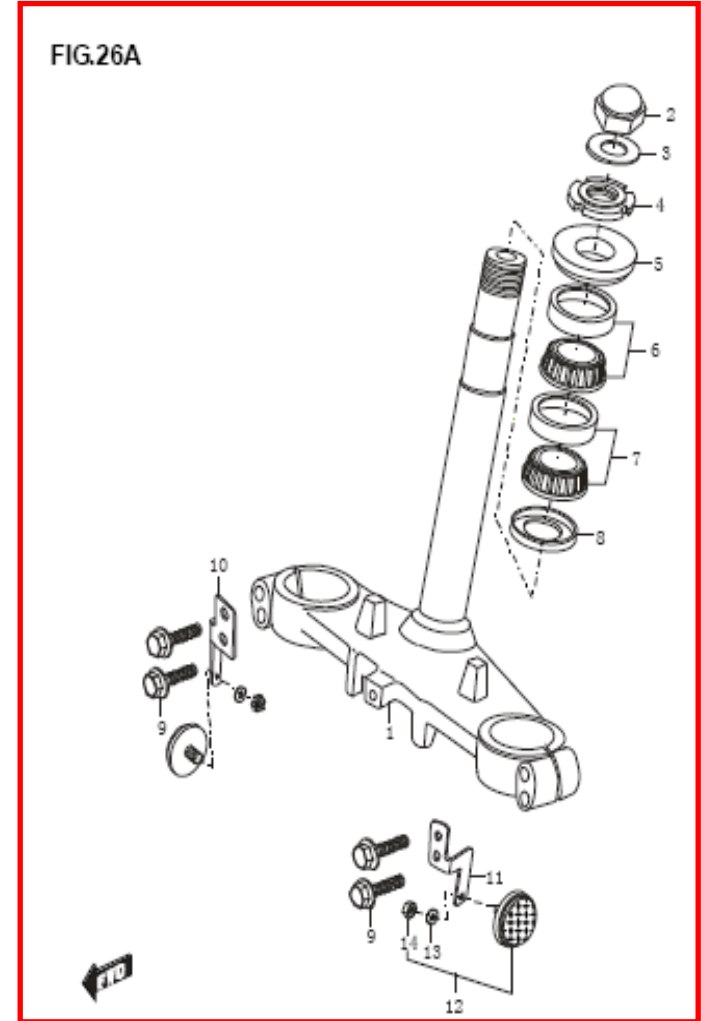 

**FIG.26A**

Ref.No.	Part No.	Description
1	51410QMNZ050	Steering stem
2	51358QMNZ050	Nut
3	51356QMNZ050	Washer
4	51631QMNZ050	Nut
5	51643QMNZ050	Dust seal
6	05610Q03020S	Bearing 30205
7	05610Q32006X	Bearing 32006X
8	51640QMNZ000	Dust cover
9	02104Q080451	Bolt M8×45
10	51481QMNZ050	Bracket, reflex reflector RH
11	51491QMNZ050	Bracket, reflex reflector LH
12	35091QAGZ030	Reflex reflector comp
13	05420Q011064	Washer 6
14	05401Q012064	Nut M6

FIG.27

Ref.No.	Part No.	Description
1	51103QMN2000	Fork assy, front RH
2	51104QMN2000	Fork assy, front LH
3	51113QMNZ000	Cap
4	51117QMNZ000	O ring
5	51171QMN2000	Spring
6	51146QMN2000	Postion, inner
7	51196QMNZ000	Piston ring
8	51177QMN2000	Spring
9	51111QMNZ000	Tube, inner
10	51118QMNZ000	Piston ring
11	51195QMNZ000	Piece, oil lock
12	51571QMNZ000	Boot
13	09407Q204002	Clamp
14	51173QMNZ000	Oil seal
15	51156QMNZ000	Ring, oi l seal stopper
16	51151QMNZ000	Washer I
17	51153QMNZ000	Oil seal
18	51157QMNZ000	Washer II
19	51167QMNZ000	Bush
20	51575QMNZ000	Clamp assy
21	51131QMNZ000	Tube, outer RH
22	51148QMNZ000	Washer
23	03614Q008254	Bolt
24	51141QMNZ000	Tube, outer LH
25	51450QMN2000	Clip, cable
26	02304Q060122	Bolt M6×12
27	59471QMN2000	Clamp, brake hose III
28	03454Q360162	Screw M6×16

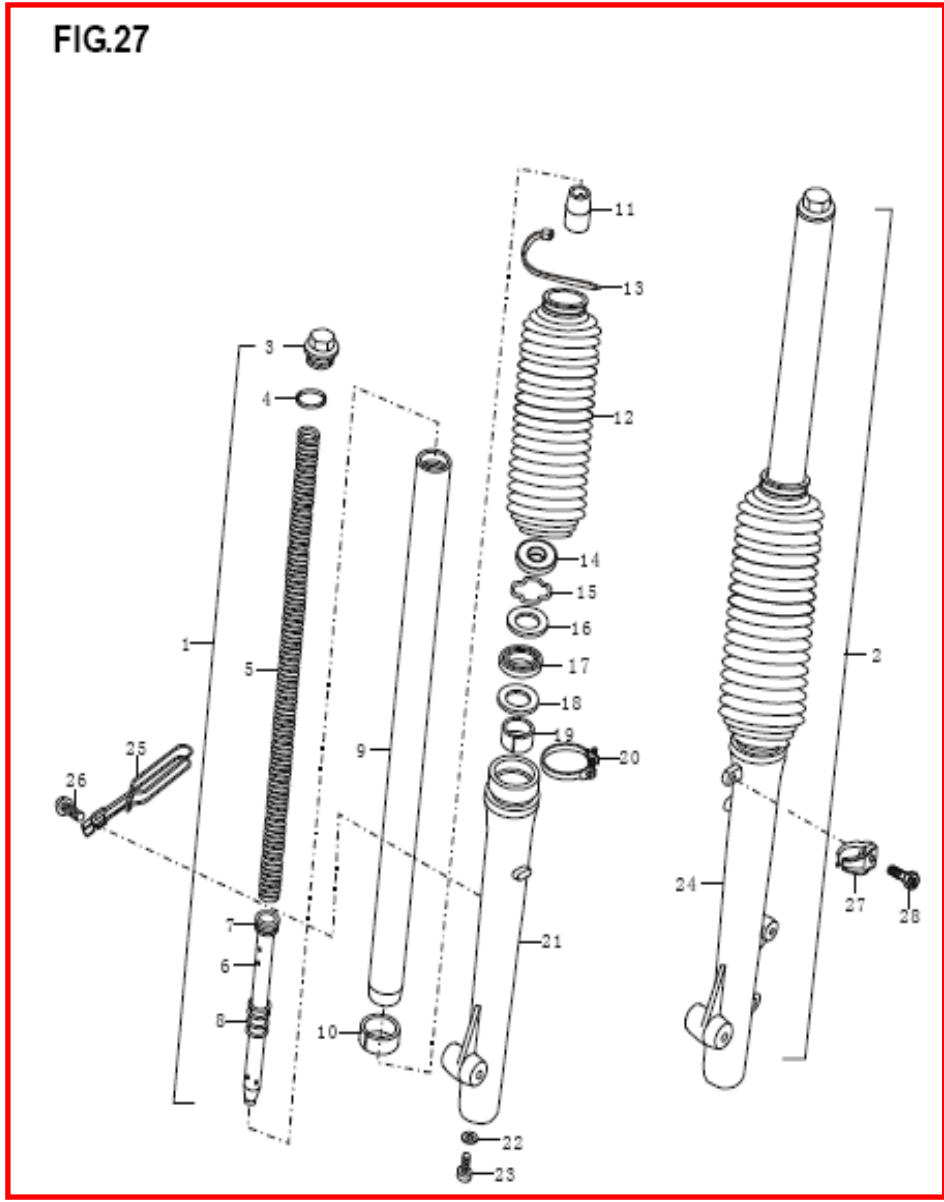 


FIG.27A

Ref.No.	Part No.	Description
1	51104QMNZ050	Fork assy, front LH
2	51103QMNZ050	Fork assy, front RH
3	51575QMNZ050	Stopper
4	51113QMNZ000	Bolt
5	51161QMNZ050	Rim
6	51153QMNZ050	Seal
7	51140QMNZ050	Tube, outer LH
8	51143QMNZ050	Bracket, disk
9	02104Q060122	Bolt M6×12
10	59471QMNZ050	Cover
11	03411Q050202	Screw M5×20
12	05404Q012052	Nut M5
13	51133QMNZ050	Bracket, front wheel
14	03414Q050123	Screw M5×12
15	03611Q008221	Screw M8×22
16	52454QMNZ050	Cover, front fork LH
16A	52454QMN2010	Cover, front fork LH
17	52453QMNZ050	Cover, front fork RH
17A	52453QMN2010	Cover, front fork RH
18	51450QMNZ050	Clip
19	51117QMNZ050	O ring
20	51131QMNZ050	Outer tube
21	51123QMNZ050	Clip
22	51156QMNZ050	Washer
23	51153QMNZ050	Oil seal
24	51159QMNZ050	Ring, oil seal stopper
25	51173QMNZ050	Rubber protector
26	51120QMNZ050	Telescope
27	51171QMNZ050	Spring
28	51176QMNZ050	Spacer
29	51112QMNZ050	Postion, inner

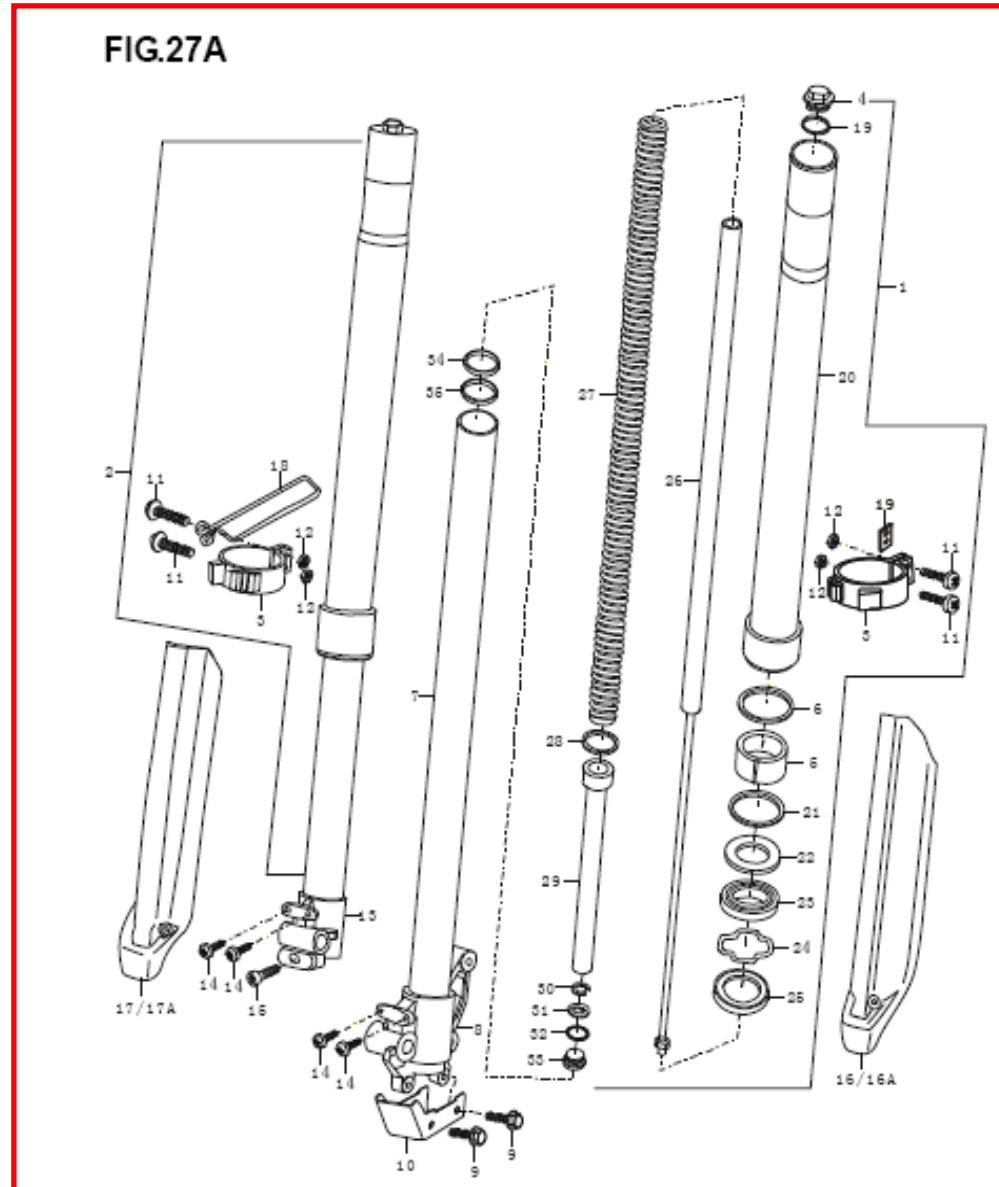 


FIG.27A

30	51149QMNZ050	Clip
31	51181QMNZ050	Rubber
32	51148QMNZ050	O' ring
33	51189QMNZ050	Bolt
34	51152QMNZ050	Bushing
35	51172QMNZ050	Bushing

FIG.28

Ref.No.	Part No.	Description
1	62011QMN2000	Shock absorber, rear
2	62101QMN2000	Shock absorber, rear
3	62177QMN2000	Bush
4	62178QMN2000	Oil seal I
5	05430Q051241	Circlip, spring
6	62176QMN2000	Bearing
7	05409Q101101	Nut M10×1.25
8	02504Q100501	Bolt M10×50×1.25
9	02504Q100601	Bolt M10×60×1.25
10	09160Q150002	Washer 15
11	09283Q380001	Oil seal 38/48/4
12	61241QMNZ000	Spacer
13	09263Q380002	Bearing HK38/48/25
14	09301Q100001	Bush
15	09168Q180001	Dust cover
16	09381Q260001	Circlip, spring
17	05812Q300012	Bearing GEG12C
18	61216QLY2010	Shaft M14×128
19	05409Q091141	Nut M14×1.5
20	09103Q120005	Bolt M12×60
21	<a href="#">05409Q101121</a>	Nut M12×1.25
22	61230QNA2000	Rocker, rear shock absorber
23	62187QMN2000	Bush , lower

 
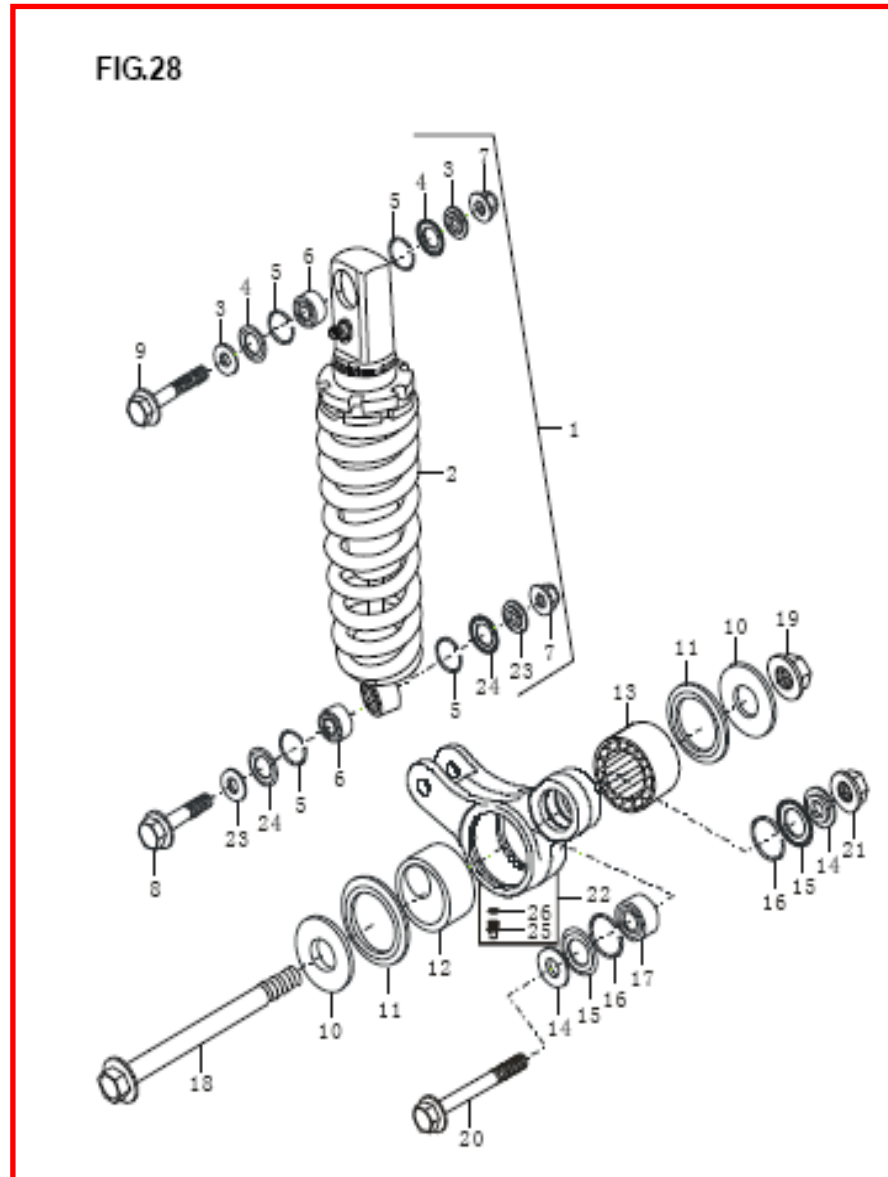 


FIG.28

24	62188QMN2000	Rubber bush II
25	66550QNA2000	Bleed, valve
26	61228QNA2000	Washer

FIG.29

Ref.No.	Part No.	Description
1	61100QNA2000	Swinging arm assy, rear
1A	61100QNA2010	Swinging arm assy, rear
2	61211QNA2000	Shaft, swinging arm
3	61262QLAZ000	Cover, shaft
4	09160Q140002	Washer
5	61251QNA2000	Bush
6	09286Q200001	Oil seal
7	09263Q200002	Bearing TA2030Z
8	05409Q091141	Nut M14×1.5
9	09283Q200001	Oil seal
10	09180Q140001	Bushφ14×φ20×35
11	05714Q020A20	Bearing NK 20/20
12	61273QMNZ000	Buffer, chain
13	<a href="#">02304Q060162</a>	Screw M6×16
14	61041QMN2070	Adjuster assy , R
15	61042QMN2070	Adjuster assy , L
16	61410QMN2070	Adjuster
17	05420Q014081	Washer 8
18	61451QMN2070	Nut
19	61452QMN2070	Nut
20	61421PMN2070	Piece
21	64790QMN2000	Indicator, LH
22	64780QMN2000	Indicator, RH
23	05420Q021141	Washer 14
24	48128QMN2000	Guard, mud
25	48931QMN2000	Board

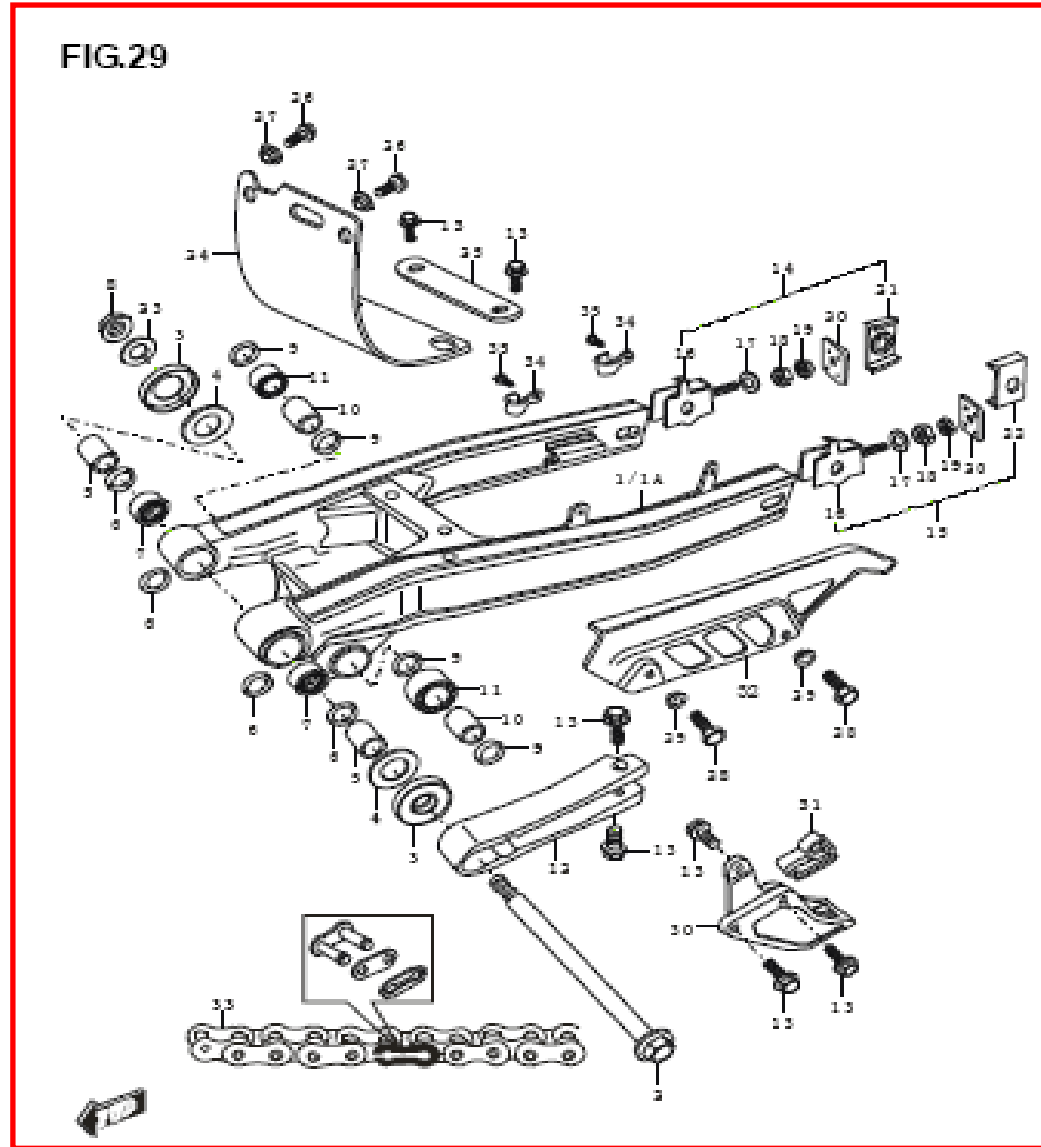 


**FIG.29**

26	02304Q060122	Bolt M6×12
27	09169Q060003	Washer
28	01601Q060102	Bolt M6×10
29	<a href="#">09169Q060001</a>	Washer
30	61277QMNZ000	Stopper lower
31	61276QMNZ000	Stopper upper
32	61311QMNZ000	Case, chain
33	27600QNA2000	Chain, drive520RO
34	<a href="#">69241QMNZ120</a>	Clamp, oil hose
35	<a href="#">03617Q005121</a>	Screw M5×12

**FIG.30**

Ref.No.	Part No.	Description
1	<a href="#">69011QNA2002</a>	Rear disk brake assy
2	69600QMNZ120	Cylinder assy, master
3	<a href="#">37701QNA2000</a>	Switch assy, stop lamp
4	69645QMNZ120	Nut
5	05403Q012084	Nut M8
6	69647QMNZ120	Nut
7	04722Q060181	Pin 6×16
8	04411Q160164	Cotter pin1.6×16
9	69280QNA2000	Hose, rear brake
10	69292QMNZ120	Bolt 2
11	69293QMNZ120	Washer
12	69100QNA2000	Caliper, rear brake
13	69140QNA2000	Pad set
14	69130QNA2000	Pad set
15	69115QNA2000	Spring, pad
16	02304Q060162	Bolt M6×16
17	69694QMNZ120	Cover
18	<a href="#">43011QNA2000</a>	Pedal , brake
19	09443Q140001	Spring

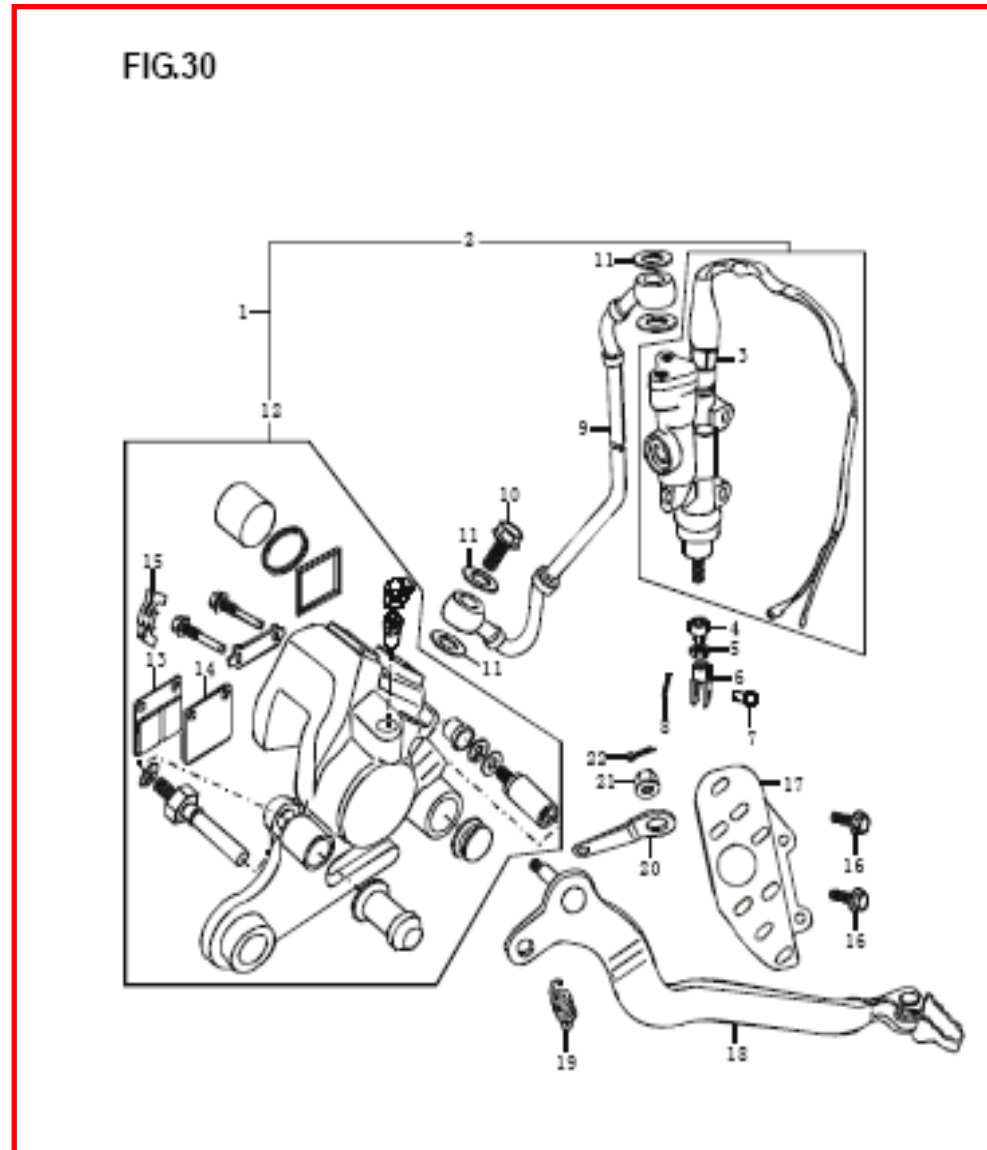

**FIG.30**

20	43131QMN2000	Hook, spring
21	05409Q081081	Nut M8
22	04411Q200201	Cotter pin2×20

**FIG.31**

Ref.No.	Part No.	Description
1	54091QNA2000	Front wheel
2	54143QMN2010	Rim assy, front wheel
3	55311QLYZ010	Rim, front wheel1.6x21
4	55321QMNZ000	Spoke, front wheel inner
5	55322QMNZ000	Spoke, front wheel outer
6	55326QMNZ000	Nipple
7	55200QNA2000	Tube assy, inner 2.75-21
8	55110QNA2000	Tire comp, outer 2.75-21
9	55211QLYZ000	Protector, inner tube
10	54711QMNZ000	Axle, front M14×1.5×224
10A	54711QLYZ010	Axle, front
11	54225QLYZ000	Spacer, front left
11A	54225QMNZ050	Spacer, front left
12	05580Q006202	Bearing 6202-2RS
13	54731QLYZ000	Spacer, front wheel bearing
14	59410QNA2000	Disk, front brake
15	59421QLYZ000	Bolt M8×20
16	54893QMNZ000	Oil seal
17	54600QMNZ000	Box assy, speedometer gear
17A	54600QMN2010	Box assy, speedometer gear
18	03451Q050161	Screw M5×16
19	05409Q091141	Nut M14×1.5
20	54012QLYZ000-015	Rim assy, front wheel

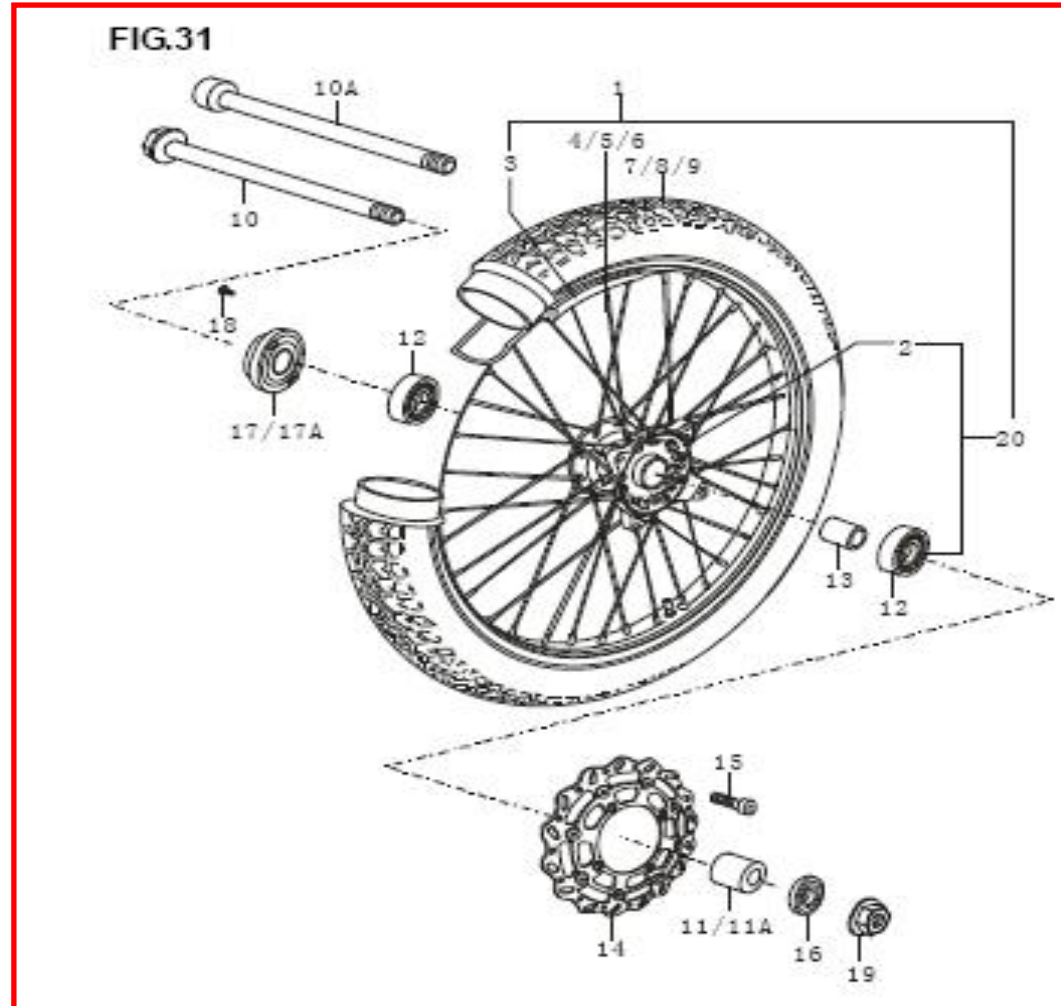




 FIG.31A

Ref.No.	Part No.	Description
1	54091QNA2010	Front wheel
2	54143QMN2010	Rim Assy, front wheel
3	55311QNA2010	Rim, front wheel
4	55321QMN2010	Spoke, front wheel inner
5	55322QMN2010	Spoke, front wheel outer
6	55326QMNZ000	Nipple
7	55200QNA2010	Tube Assy, inner 110/70-
8	55110QNA2010	Tire comp, outer 110/70-
9	55211QMN2010	Protector, inner tube
10	54711QLY2010	Axle, front
11	54225QMNZ050	Spacer, front left
12	05580Q006202	Bearing 6202-2RS
13	54731QLYZ000	Spacer, front wheel bearing
14	59410QNA2000	Disk, front brake
15	59421QLYZ000	Bolt M8×20
16	54893QMNZ000	Oil seal
17	54600QMN2010	Box Assy, speedometer gear
18	03451Q050161	Screw M5×16
19	54012QLYZ000-017	Rim Assy, front wheel

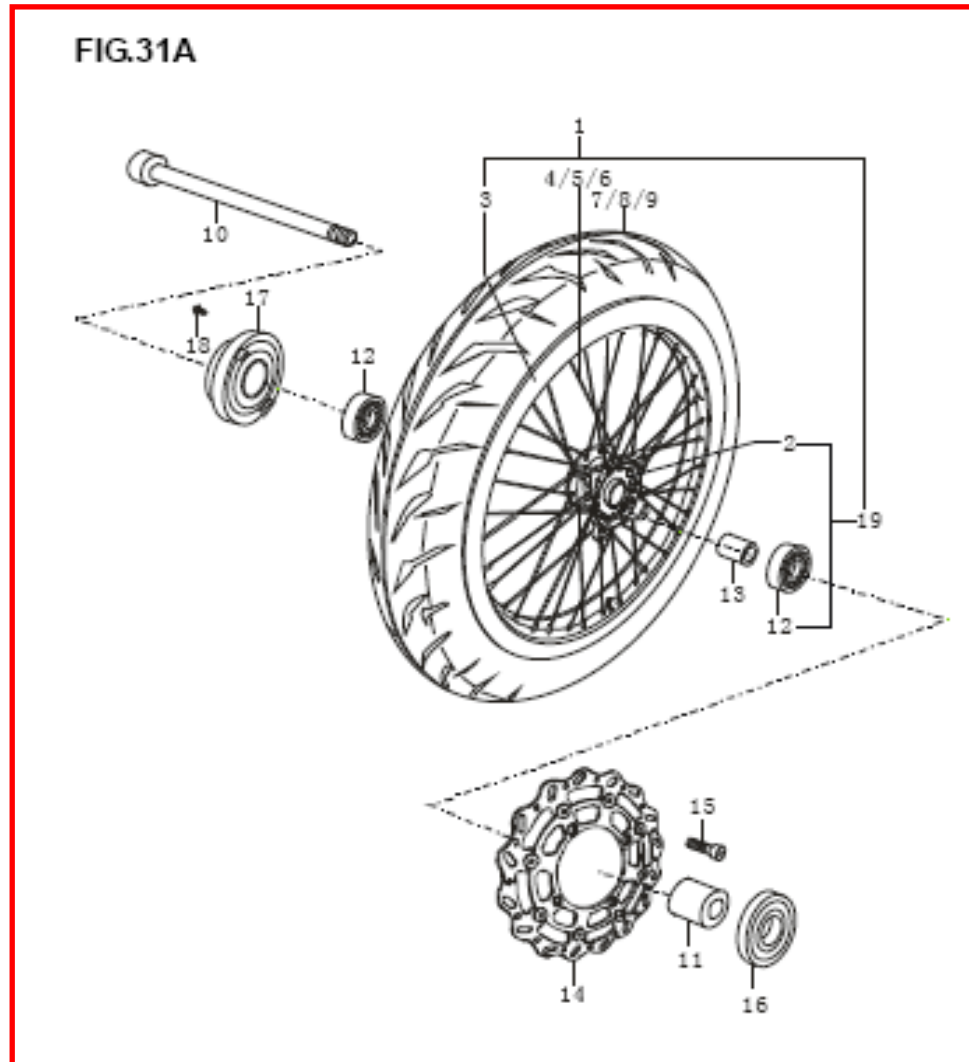 




FIG.32

Ref.No.	Part No.	Description
1	64091QNA2000	Wheel, rear
2	64011QNA2000	Rim assy, rear wheel
3	64111QNA2000	Rim assy, rear wheel
4	64813QMNZ120	Oil seal R
5	05570Q006302	Bearing 6302-RS
6	64732QMNZ120	Support
7	64731QMNZ120	Spacer
8	64811QMNZ120	Oil seal L
9	64737QMNZ120	Spacer R, rear axle
10	65311QMA2000	Rim, rear wheel 2.15×18
11	65331QMNZ120	Spoke L, rear wheel
12	65321QMNZ120	Spoke R, rear wheel
13	65326QMNZ000	Nipple
14	65100QNA2000	Tire comp, rear 4.10-18
15	65200QNA2000	Tube assy, wheel inner
16	65211QLYZ000	Protector, inner tube
17	64750QNA2000	Spacer L, rear axle
18	64511QNA2000	Sprocket, rear
19	64683QMNZ120	Bolt M10×1.25×45
20	05409Q101101	Nut M10×1.25
21	64711QNA2000	Axle, rear M14×287
22	69210QNA2000	Disk, rear brake
23	59421QLYZ000	Bolt M8×20
24	<a href="#">05420Q021141</a>	Washer 14
25	<a href="#">05409Q091141</a>	Nut M14×1.5


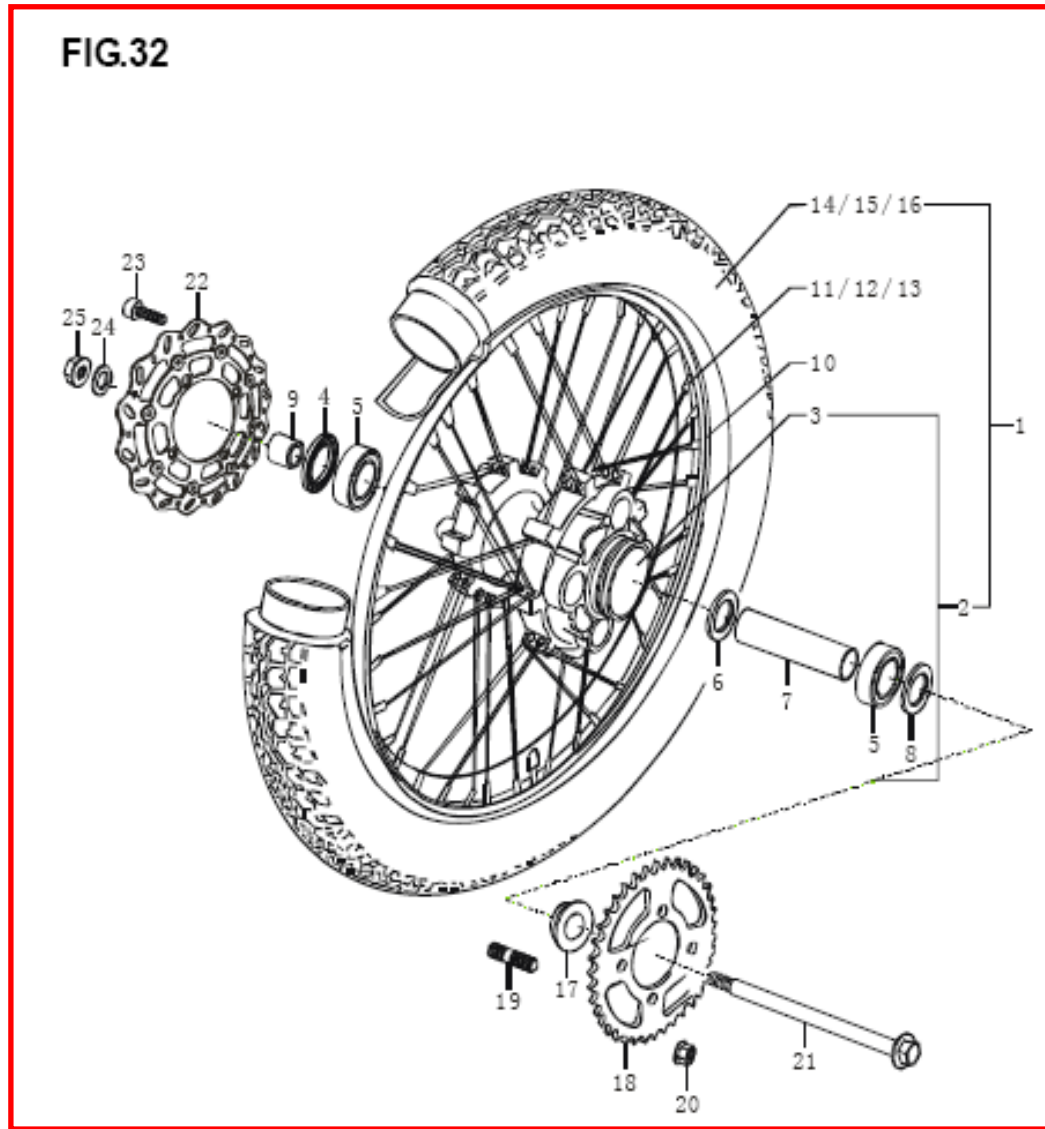 


FIG.32A


Ref.No.	Part No.	Description
1	64091QNA2010	Wheel, rear
2	64011QNA2010	Rim assy, rear wheel
3	64111QNA2010	Rim assy, rear wheel
4	64813QMNZ120	Oil seal R
5	05580Q006302	Bearing 6302-2RS
6	64732QMNZ120	Support
7	64731QMNZ120	Spacer
8	64811QMNZ120	Oil seal L
9	64737QMNZ120	Spacer R, rear axle
10	65311QNA2010	Rim, rear wheel MT3.5-17
11	65331QMN2090	Spoke L, rear wheel
12	65321QMN2090	Spoke R, rear wheel
13	65326QMNZ000	Nipple
14	65200QNA2010	Tube assy, wheel inner
15	65110QNA2010	Tire comp, rear 130/70-
16	55211QMN2010	Protector, inner tube
17	64750QNA2000	Spacer L, rear axle
18	64511QNA2000	Sprocket, rear
19	64683QMNZ120	Bolt M10×1.25×45
20	05409Q101101	Nut M10×1.25
21	64711QNA2000	Axle, rear M14×287
22	69211QNA2000	Disk, rear brake
23	59421QLYZ000	Bolt M8×20
24	05420Q021141	Washer 14
25	05409Q091141	Nut M14×1.5

FIG.32A

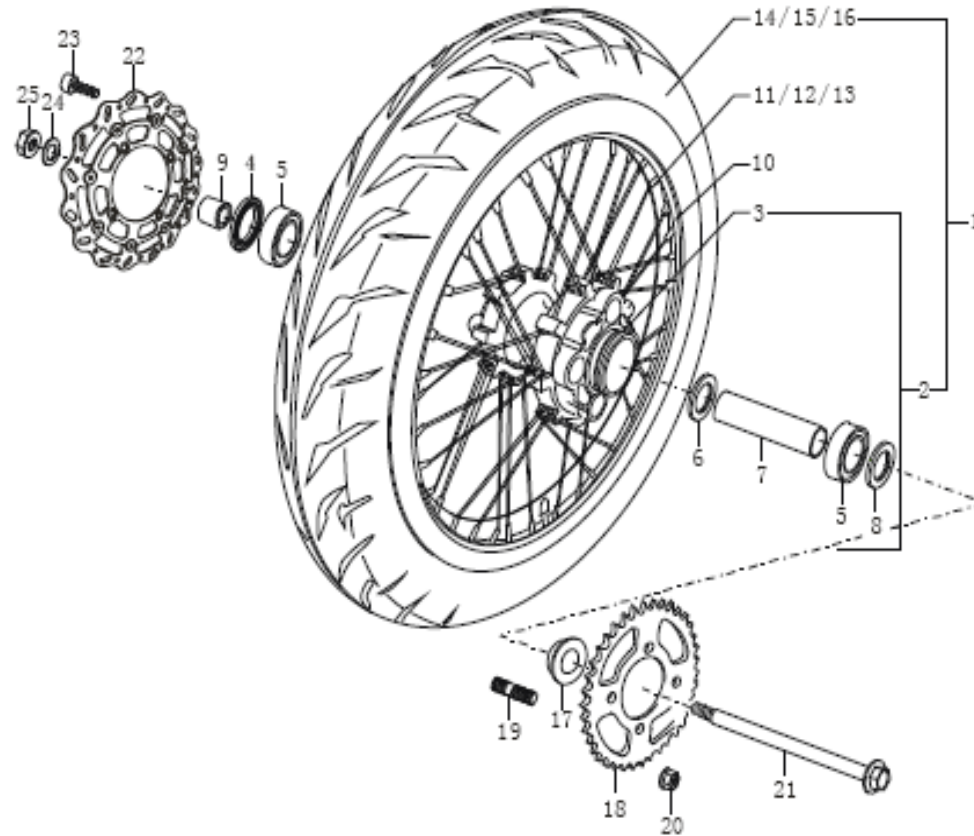 

**FIG.33**

Ref.No.	Part No.	Description
1	47431QMNZ000	Tool box
2	47432QMNZ000	Cap, tool box
3	02304Q060202	Bolt M6×20
4	09169Q060011	Bushφ6.5×18×6.5
5	96501QMN2000	Tool kit
6	47461QMN2000	Cushion , tool

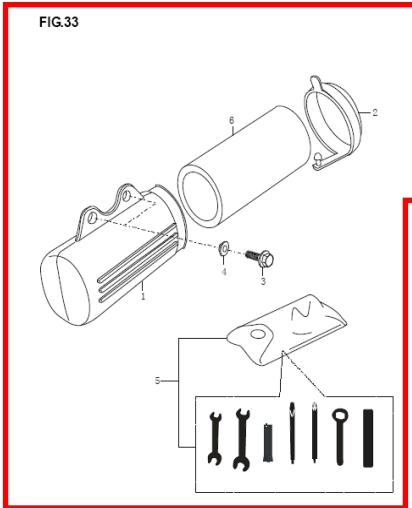 

**FIG.34**

Ref.No.	Part No.	Description
1	16610QMN2240	Oil radiator assy
2	16620QNA2000	Bracket, oil radiator
3	16630QNA2000	Oil hose, intake
4	16640QNA2000	Oil hose, outlet
5	16634QMN2240	Bolt 11M12×1.25×29
6	16633QMN2240	Bolt1M14×1.25×27
7	09168Q130801	Washer
8	02304Q060252	Bolt M6×25
9	02304Q060202	Bolt M6×20
10	33653QMD2000	Spacer
11	09320Q080002	Cushion

